

OWNER'S MANUAL

GAS CYLINDER STEEL BUMPER

Contents

Receiving Instructions	1	Mounting Recommendations	1
Warranty	1	Mounting Instructions	1

RECEIVING INSTRUCTIONS

Every unit is thoroughly tested and inspected prior to shipment. However, it is possible that the unit may incur damage during transit. If damage is noticed when unloading, make a note of it on the **BILL OF LADING**. Remove all packing and strapping material, then inspect the unit again for damage. **IF DAMAGE IS EVIDENT, FILE A CLAIM WITH THE FREIGHT CARRIER IMMEDIATELY!**

WARRANTY

This product is warranted for 90 DAYS from date of purchase to be free of manufacturing defects in material and workmanship.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use or application contrary to installation instructions, or disassembly, repair or alteration by any person prior to authorization from a factory representative.

INCLUDED

- (1) Steel Bumper
- (1) Heavy Duty Nylon Strap Assembly

NOTE


Hardware used to mount your bumper bracket to the wall is not included. Your mounting surface will determine the hardware used for installation.

MOUNTING RECOMMENDATIONS

- **CONCRETE WALL:** (2) 3/8" diameter x 3-1/2" long lag screws with masonry expansion shields
- **WOOD WALL:** (2) 3/8" diameter x 3-1/2" long wood screws
- **CINDER BLOCK WALL:** (2) 3/8" diameter x 3-1/2" long lag screws with masonry expansion shields.
- **DRY WALL:** (2) 3/8" diameter x 4-1/2" long t-style hollow wall anchors. *Drywall material recommendation is listed above, but it is not advisable due to lack of surface strength unless anchored to a stud.*

MOUNTING INSTRUCTIONS:

- 1) For best stability results, mount your steel bumper approximately 2/3 up from the floor using the average height of your most commonly used gas cylinder.

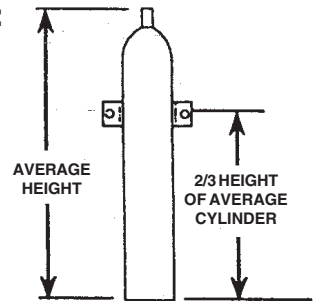

- 2) Push each bolt through their respective holes on the steel bumper bracket. Then proceed to anchor to the wall.

