

Warning Electric shock hazard. Only qualified service personnel should operate the equipment.

Refer all repairs and modifications to a distributor or service technician.

Failure to heed may result in serious injury or death.

Front Panel Display and Keypad

The indicator front panel has a seven segment, six digit LED display with:

- six primary scale function keys
- power (ON/OFF) key
- eight LED lights

For complete description of indicator front panel see Operator's Manual PN 119201.

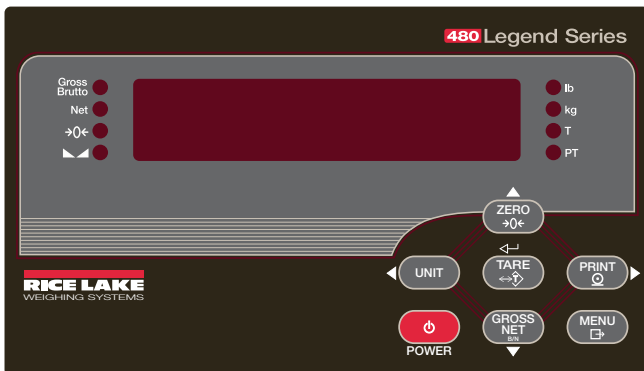


Figure 1. Indicator Front Panel

To Enter and Exit User Menu

(See Figure 2.)

1. Press **MENU**.
2. Press **▽** to AUDIT.
3. Press **◀** or **▶** to select the desired parameter.
4. Press **▽** to enter parameter; follow the instructions for modifying that parameter.
5. When complete, press **△** until MENU is displayed.
6. Press **△** again to return to weighing mode.

To Edit a Numeric Value

Note Press **◀** or **▶** to select the digit.
 Press **△** or **▽** to increment or decrement the value.
 Press **TARE** when the value is correct.

Indicator Operations

Zero Scale

1. In gross mode, remove all weight from the scale and wait for the **↔** LED to light.
2. Press **ZERO →0←**. The **→0←** LED lights to indicate the scale is zeroed.

Toggle Units

1. Press **UNIT** to toggle between primary and secondary units. The current unit LED will be lit.

Acquire Tare

1. Place container on scale; wait for the **↔** LED to light.
2. Press **TARE** to acquire the tare weight of the container. Net weight is displayed and the **T** LED lights to show the tare value was entered.

Preset Tare (Keyed Tare)

1. With the scale empty and display showing zero weight, press **TARE**.
2. Display will show (000000), the focused digit will flash.
3. To edit the value, see "To Edit a Numeric Value".
4. The display will change to the Net mode and the PT LED lights to show the preset tare was entered.

Display Tare

1. Enter USER MENU. See "To Enter and Exit User Menu".
2. Navigate to **TARE**, then press **▽**.
3. Exit USER MENU. See "To Enter and Exit User Menu".

Note If there is no tare in the system, the value displayed will be zero and the Gross and Net LED will be turned off.

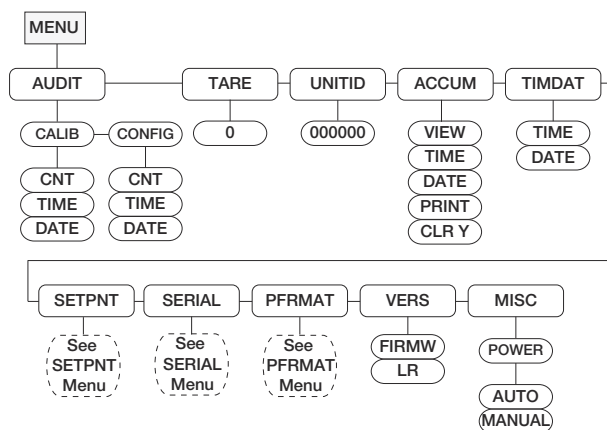


Figure 2. Menu Key User Menu

Print Ticket

1. Press **PRINT** to print either the Gross or Net format. Also, when enabled and displayed it is used to print the accumulator.
 2. Wait for **↔** LED to light.
 3. Press **PRINT** to send data to the serial port.
- Note** If **↔** LED is not lit, the **PRINT** key command is executed if the scale comes out of motion within 3 seconds.

Toggle Gross/Net Mode

1. Press **GROSS NET** to switch the display mode between gross and net. If a tare value has been entered or acquired, the net value is the gross weight minus the tare.
 - Gross mode – *Gross/Brutto* LED is lit.
 - Net mode – *Net* LED is lit.

Display or Change Time & Date

To set the date and time:

1. Enter USER MENU. See "To Enter and Exit User Menu".
2. Navigate to **TIMDAT** (TIME/DATE).
3. Press **▽** and select Time or Date with **◀** or **▶**.
4. Press **▽** to view the current setting.
5. To edit the value, see "To Edit a Numeric Value".
6. Exit USER MENU. See "To Enter and Exit User Menu".

Note Use the same procedure to enter the date in the same format configured for the indicator: MMDDYY, DDDMMYY, YYYYMMDD or YYDDMM.

Display and Edit Setpoint Value

1. Enter USER MENU. See "To Enter and Exit User Menu".
2. Navigate to **SETPNT**, press **▽**.
3. Navigate across to desired setpoint number (1-8).
4. Press **▽** and navigate across to select User.
5. Press **▽** and navigate across to select Enable, Value, PreAct or Hysteresis.
6. Press **▽** to view, enable or edit the value. (See "To Edit a Numeric Value")
7. Exit USER MENU. See "To Enter and Exit User Menu".

Display Accumulator

1. Enter USER MENU. See "To Enter and Exit User Menu".
2. Navigate to **ACCUM**, press **▽**.
3. Press **◀** or **▶** to select VIEW, TIME, DATE, PRINT or CLR. Press **▽**.
4. For VIEW, TIME, DATE, press **△** to return to ACCUM.
 - For PRINT or CLEAR, press **TARE** to print or clear the accumulator.
5. Exit USER MENU. See "To Enter and Exit User Menu".

Refer to Manual (PN119201) for detailed instructions
 Manuals are available on our web site at
<http://www.ricelake.com/manuals.aspx>



US 800-472-6703 International 715-234-9171