



BLUFF
MANUFACTURING, INC.

MINI-RAMP

Unloading Instructions

FLAT BED

Shipped on its side:

1. Remove any and all shipping rigging (i.e. straps, clamps, chains, etc.).
2. Using a lifting strap, wrap around the lift lug located on the top side.
3. Lift unit off the truck.
4. Have truck drive out from under the raised unit if possible.
5. Lower unit onto ground surface.
6. Tilt the ramp unit such that it will be laid over slowly using the lift.
7. Attach the screw jacks to both sides and raise the unit before moving.

Shipped right side up:

1. Remove any and all shipping rigging (i.e. straps, clamps, chains, etc.).
2. Using lifting straps, lift the unit from four points so that the unit will be lifted in the same position.
3. Have the truck move out from under the suspended unit.
4. Slowly lower the unit onto surface.
5. Attach the screw jacks to both sides of unit and raise the unit.
6. Manually move the unit into position.

CLOSED TRUCK OR CONTAINER

Shipped right side up:

1. Remove any restraining equipment.
2. Raise the unit.
3. Attached the screw jacks (if purchased).
4. Raise the unit with the screw jacks until the unit is off the ground.
5. Manually push the unit out of the truck/container.
6. Move to position.

CAUTION:

These instructions are strictly a suggested method to unload your equipment by the manufacturer. Personnel unloading should consider all safety practices to safely unload the unit. Also, when the unit is in use, the unit should be secured and screw jacks completely raised off the ground surface.

SERVICE YOU CAN STAND ON

(800) 433-2212 • www.bluffmanufacturing.com • Fax 817-293-7570
1400 Everman Parkway • Suite 156 • Fort Worth, TX 76140