


## How to Store Memory Positions

### Workstation Part Prefix

PB  
PBC  
PBH  
PBHC  
PHF  
LPC

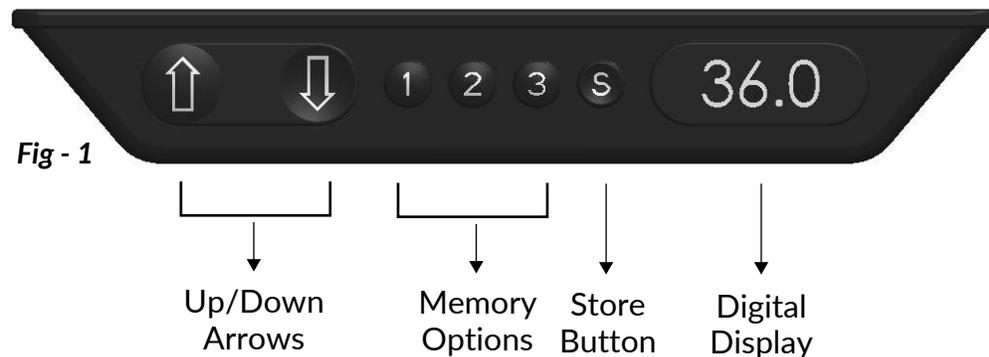

### Adjusting Initial Height:

Programmable height switch displays 24.5" height by default and resetting will be required to match actual height of work surface

- 1 Measure height from floor to top of work surface
- 2 Press the up and down arrows at the same time and hold for 5 seconds
- 3 When the display shows three minuses (---), adjust digital display using the up or down arrows to measured height
- 4 After 5 seconds of inactivity, there will be a short blink and system is set

### To Set Height:

- 1 Using the up and down arrows, raise or lower workstation to desired height
- 2 Once in position, push the store button and release
- 3 Press and hold the desired memory option for three seconds then release

### To Use Programmed Height:

- 1 Press and hold desired preset memory button until the workstation stops moving