

KEY BEST PRACTICES GENIEGRIPS® CAPS



▲ CAP WIDTH:

The GenieGrips® Caps are manufactured smaller than the width of the fork tyne to allow the rubber to 'grip'.

▲ CAP INSTALLATION:

Firmly push Cap on to the tyne - use a rubber mallet to hammer the the Cap on to the tyne. Ensure the tip of the tyne touches the inside back cap.

▲ ALWAYS:

Ensure GenieGrips® Caps are kept clean and free of contamination (eg grease, oil, paint, etc). Using warm soapy solution and then a dry cloth remove any moisture or residue.



▲ DURING USE:

Important: When using the GenieGrips® Caps, forklift drivers must enter the pallet at a 90 degree angle and allow sufficient clearance above and below tyne when entering/exiting to ensure Cap installation is not compromised.

▲ REMOVAL:

Using a chisel and hammer, take turns tapping each side of the Cap to remove from tyne.

▲ STORAGE

Store Caps in protective drawstring bag provided



ALWAYS:

- Ensure forklift truck is only operated by licensed/trained personnel and in accordance with manufacturer's safe operating procedures.

IMPORTANT:

Frequently check that the Caps are tight and touching the tip of the forklift tyne.