

INSTRUCTION FOR INTERCHANGEABLE CORE LOCK


Instruction for the extraction

1. Place the key in the cylinder. (The key has to be vertical)
2. Turn the key to 2 o'clock (locked) or 10 o'clock (unlocked). Core and key are in the extraction Position (Picture C-locked example).
3. Push the extraction tool in the slot as far as possible and using a little pressure release the mechanism (Picture D).
4. Extract the cylinder and key.

Picture C



Picture D

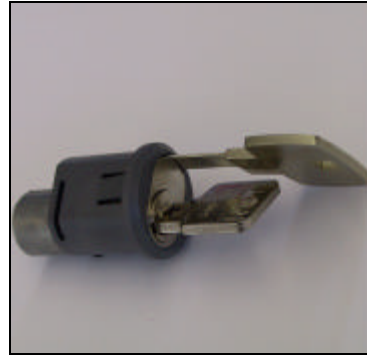

Instruction for the installation of the cylinder

1. Adjust the joining piece of the plastic insert as shown in Picture A.
2. Turn the key in the cylinder insert to 2 o'clock (locked) or 10 o'clock (unlocked), as shown in Picture B (locked example).
3. Insert the cylinder in the plastic insert, making sure that the key stays in the same position.
4. Turn the key to 12 o'clock (locked: left – unlocked: right), until the central locking mechanism catches.
5. Test the locking function.

Picture A



Picture B



LISTA INTERNATIONAL CORPORATION
106 Lowland Street
Holliston, MA 01746
Technical Support (800) 722-3020 ext. 233 or 234

