


٠<u>.</u>


TO FACILITATE INSTALLATION OF DRAWER CASE TO TOP, BASE OR STACKING. REMOVE DRAWER FROM CASE BY PULLING OUT AGAINST STOPS AND RAISE AT FRONT TO REMOVE. TO REPLACE REVERSE PROCEDURE.

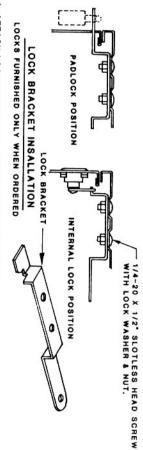


1. ATTACH LOCK BRACKET TO DRAWER CASE IN EXTERNAL OR INTERNAL LOCK POSITION AS REQUIRED.

STEEL TOP

2. PUNCH OUT PROPER KNOCK OUT AS REQUIRED. PLACE PUNCH ON OUTSIDE OF DRAWER FRONT & PUNCH INWARD.

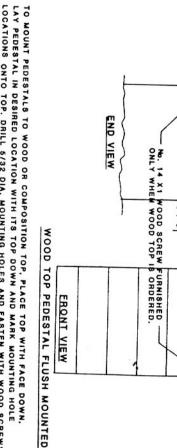

LOCATIONS ONTO TOP. DRILL 5/32 DIA. MOUNTING HOLES AND FASTEN WITH WOOD SCREWS.

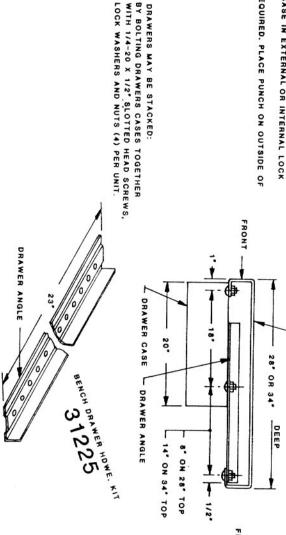

DRAWERS MAY BE STACKED:

FRONT -1/2. DRAWER CASE 8 20. STEEL TOP 24' DEEP DRAWER ANGLE

FOR BENCH TYPE DRAWERS ASSEMBLY INSTRUCTIONS



PENCO PRODUCTS INC., OAKS, PA. SUBSIDIARY OF VESPER CORPORATION

PART NO. 08354

REV 4/86