
## **Door Gate Installation Instructions**



## ILLINOIS ENGINEERED PRODUCTS, INC.

2035 South Racine Ave., Chicago, IL 60608 Tel: 312-850-3710 Toll-free: 1-877-437-4623 www.fgfred.com

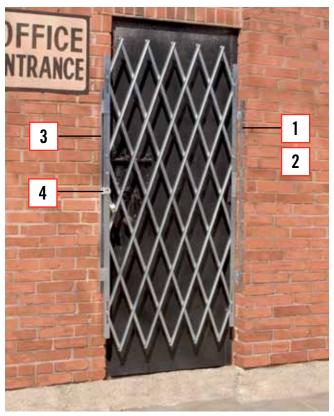

Door gates can be installed in the casing of the door or outside the door. Can be mounted on the left or right. Simply turn the gate upside down to mount on the opposite side.



Retainer straps hold door gates in retracted position.



Step 1

Caution— Pinch Point: Keeps hands and fingers out of moving diamonds of web when handling gate. Stand door gate against door frame where you intend to mount it. Mark the mounting surface through the holes in the hinge bar with a pencil. Drill mounting holes into the mounting surface. For mounting into wood use 5/16" x 2" lag bolts. For steel, drill and tap for 5/16" x 1" bolts. Brick or concrete mountings use 5/16" x 2" lag bolts in 3/8" holes with lead anchors.



Step 2

Mount the door gate by inserting bolts through hinge bar set into mounting surface



Step 3:

Stretch door gate across opening. Place locking bar onto mounting surface, align padlock holes and mark mounting surface through the holes in the locking bar with a pencil. Drill mounting holes and secure with bolts.



Step 4:

Stretch door gate across opening into locking bar, and insert padlock.