



Barrier Gate Installation Instructions

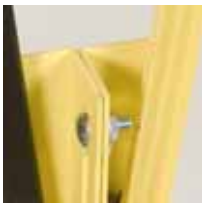

ILLINOIS ENGINEERED PRODUCTS, INC.
2035 South Racine Ave., Chicago, IL 60608
Tel: 312-850-3710 Toll-free: 1-877-437-4623
www.fgfred.com

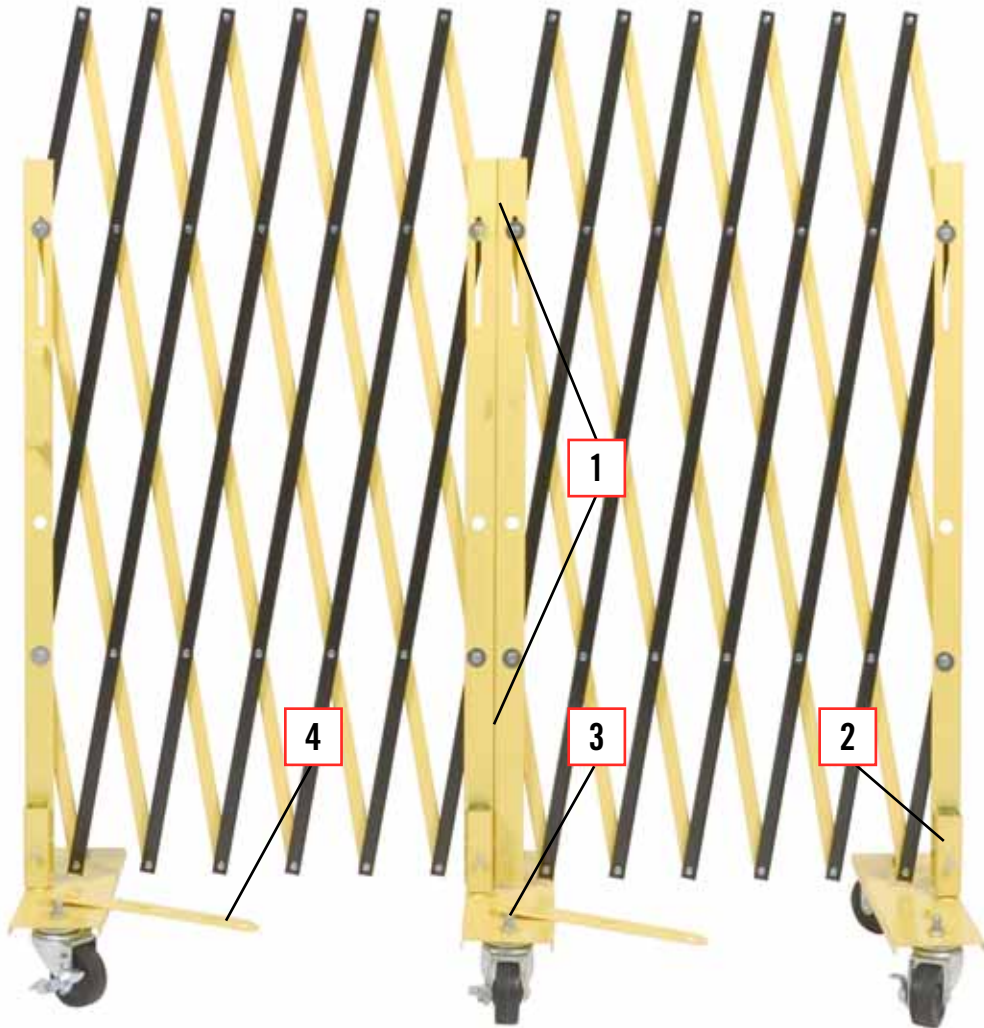

Step 1:
Caution– Pinch Point: Keeps hands and fingers out of moving diamonds of web when handling gate. Bolt both sides of gate together at top and bottom.



Step 2:
Insert each gate end into axle supports, insert bolts and tighten.



Step 3:
Thread washer onto each wheel bolt, insert through gate axle wheel hole, thread washer, insert brace, thread and tighten bolt.
Portable Gate Add-on:
Repeat steps 1-3 for each 6 foot add-on gate.



Step 4:
Collapse gate, lower gate axle locking bars into pins and roll gate to desired location.

The Most Preferred Security Gates for Business...Since 1962