


Portable Gate Installation Instructions



ILLINOIS ENGINEERED PRODUCTS, INC.
 2035 South Racine Ave., Chicago, IL 60608
 Tel: 312-850-3710 Toll-free: 1-877-437-4623
 www.fgfred.com

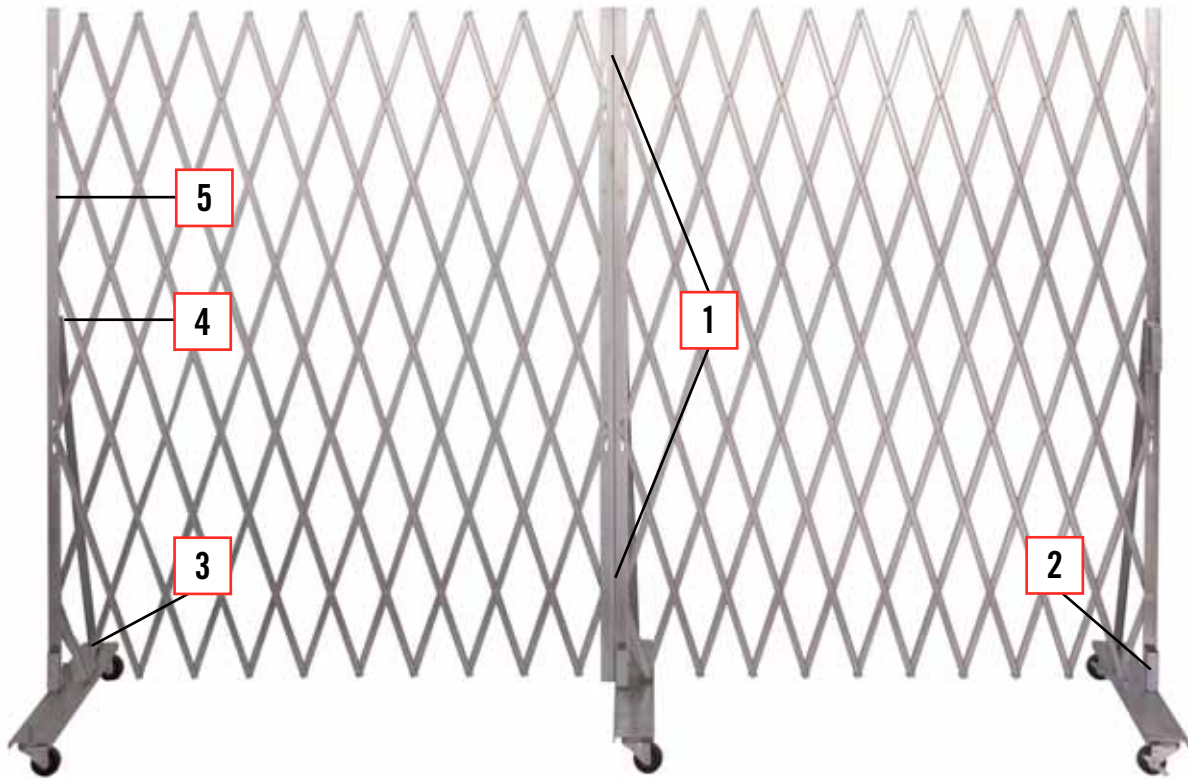

Step 1:
Caution— Pinch Point: Keeps hands and fingers out of moving diamonds of web when handling gate. Bolt both sides of gate together at top and bottom.



Step 4:
 Attach top end of braces to to each gate vertical ends.
Portable Gate Add-on:
 Repeat steps 1-4 for each 6 foot add-on gate.



Step 2:
 Insert each gate end into axle support, insert bolt and tighten.



Collapse gate, lower gate axle locking bars into pins and roll gate to desired location.



Step 3:
 Thread washer onto each wheel bolt, insert through gate axle wheel hole, thread washer, insert brace, thread and tighten bolt.



Step 5:
 Align wall locking bar so that both padlock holes align with each other. Mount to wall with hardware. Repeat on opposite end.