


# Portable Gate Installation Instructions

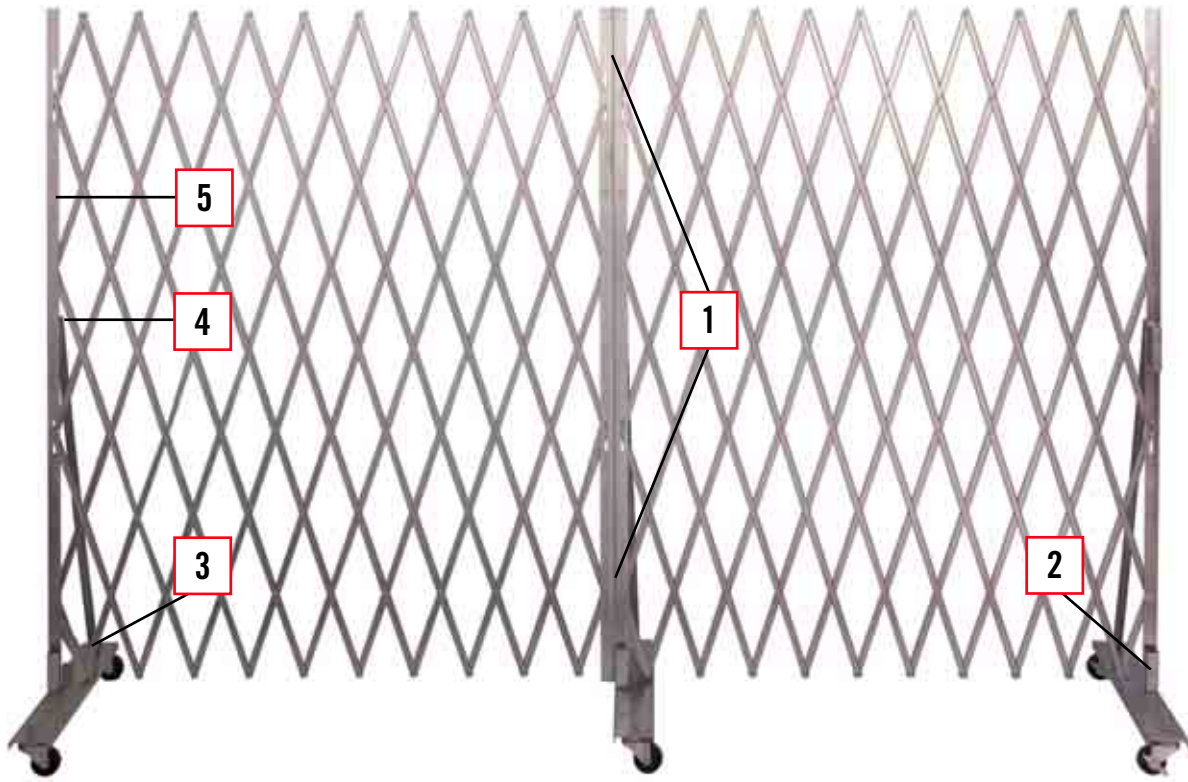

**Step 1:**  
**Caution– Pinch Point: Keeps hands and fingers out of moving diamonds of web when handling gate.** Bolt both sides of gate together at top and bottom.



**Step 2:**  
Insert each gate end into axle support, insert bolt and tighten.



**Step 3:**  
Thread washer onto each wheel bolt, insert through gate axle wheel hole, thread washer, insert brace, thread and tighten bolt.



**Step 4:**  
Attach top end of braces to to each gate vertical ends.

**Portable Gate Add-on:**  
Repeat steps 1-4 for each 6 foot add-on gate.



Collapse gate, lower gate axle locking bars into pins and roll gate to desired location.



**Step 5:**  
Align wall locking bar so that both padlock holes align with each other. Mount to wall with hardware. Repeat on opposite end.