



# CW Column Wall Mount Assembly Instructions



Note: The most important thing to remember is that if the fan is at a level near people, it should be equipped with OSHA approved Patterson finger guards. Please contact your factory sales representative to order.

1. Secure Part A of the wall bracket to the solid surface from which you will hang the fan. There is a single mounting hole on the short end of the part. Secure part A using a wall anchor, etc. (Wall anchor not included.) Place a level on the part.
2. Position part B under part A as shown and situate part B in such a way so that part A becomes level. Mark part B for the hole. Attach part B using the appropriate wall anchor, (not included).
3. Secure the "U" shaped yoke to the wall bracket using the supplied 5/8" bolt and nut. The "U" shaped yoke may open up or down, depending on whether the wall bracket is thick side up or down. If you plan to add an oscillator, mount the yoke so that it opens up. The bolt must go through all three pieces. Check for level and stability.
4. The factory assembled fan head fits inside of the "U" shaped yoke. Secure the fan head to the yoke with the supplied nuts. Mount the fan head so the motor mount is below the motor.

Note: Do not operate fan if the finger guards are damaged or missing.

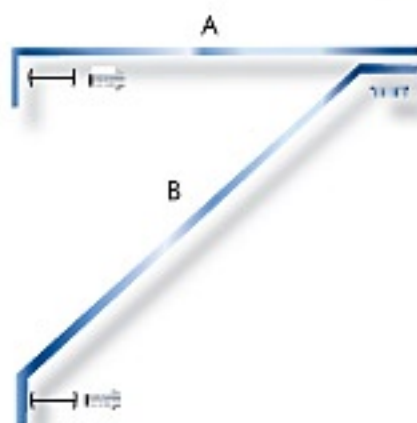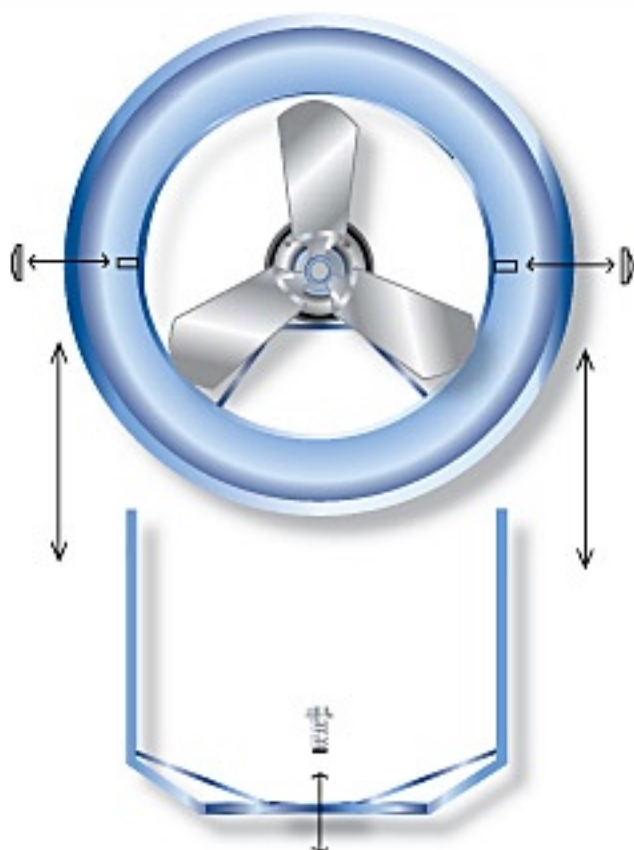

Note: Due to continual product improvement, items are subject to change without notice.

Patterson Fan Company, Inc  
Blythewood, SC 29016  
www.pattersonfan.com  
800.768.3985

**PATTERSON™**