


Anchor Bracket for Welded Lockers*

Assembly Instructions for Part Number P501Z



*** For Penco All-Welded, Angle Iron, ProTough®, Stadium® and Patriot® Lockers with a 4" high Channel Base.**

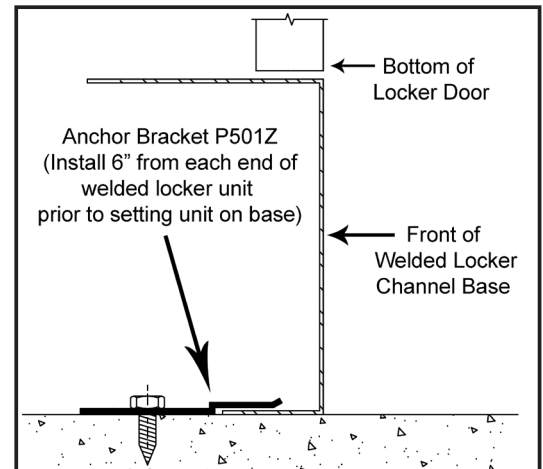

Step 1


Step 1 – Mark the floor for locker position

Mark the floor where the front of the welded locker will be when installed .

Step 2

Step 2 – Make a chalk line for anchors

Measure back 2" for the anchor bracket and strike a chalk line.

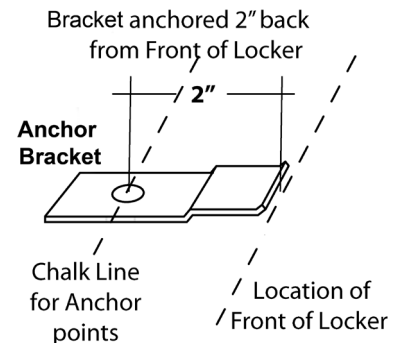

Step 3


Step 3 – Level the lockers

Make sure the lockers are level and plumb.

Step 4

Step 4 – Anchor the brackets

Install brackets by anchoring them tight to the floor (anchors must be ordered separately).

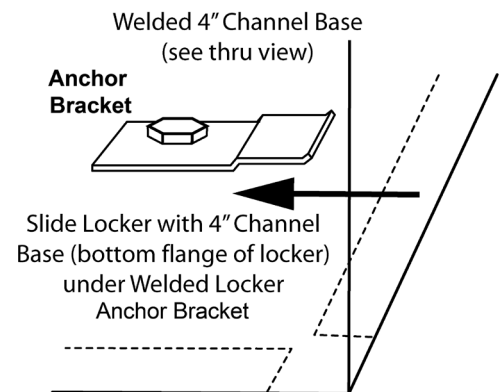

Step 5


Step 5 – Slide lockers beneath brackets

Slide the welded locker unit so the flange of the locker base catches the bracket.

Step 6

Step 6 – Secure lockers

Once bases are anchored, secure the lockers to the wall and adjoining locker groups.

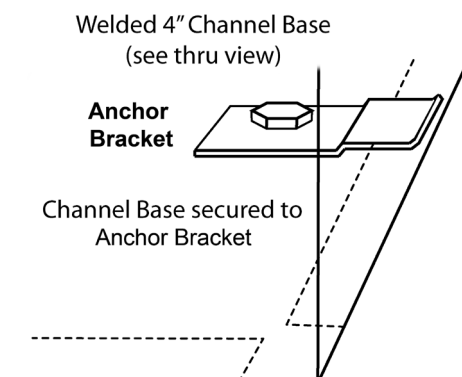

AnchorBracket-WeldedLkrs.indd/pdf Rev. 1/2011