



ASSEMBLY INSTRUCTIONS FOR HANGING OMNI-VIEW MIRRORS WITH CHAIN SET


1. Lay poly-protecting OMNI-VIEW on surface for assembly
2. Position OMNI-VIEW, open end up, on poly being careful not to scratch.

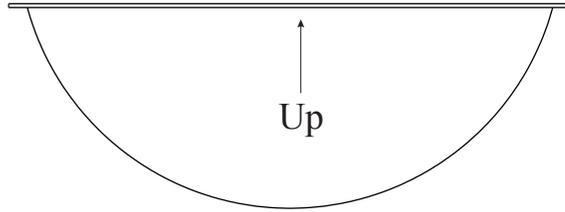


3. Hook large end of "S" hook over lip of dome into hole and chain end over small end of "S" hook.

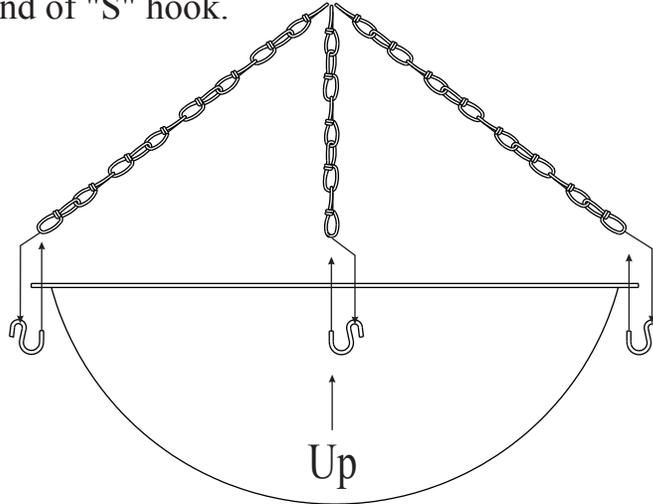

4. Attach one "S" hook to all chains.

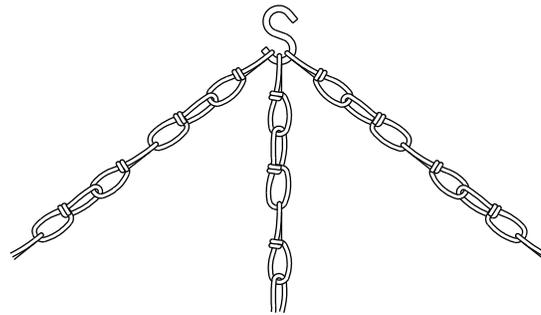

5. Hang from "S" hook with customer supplied wire, chain, rope etc.

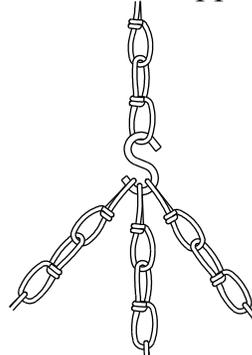

Contents:

4-"S" Hook:



3-Chains:



Made in U.S.A.