



PT Power Tube Assembly Instructions

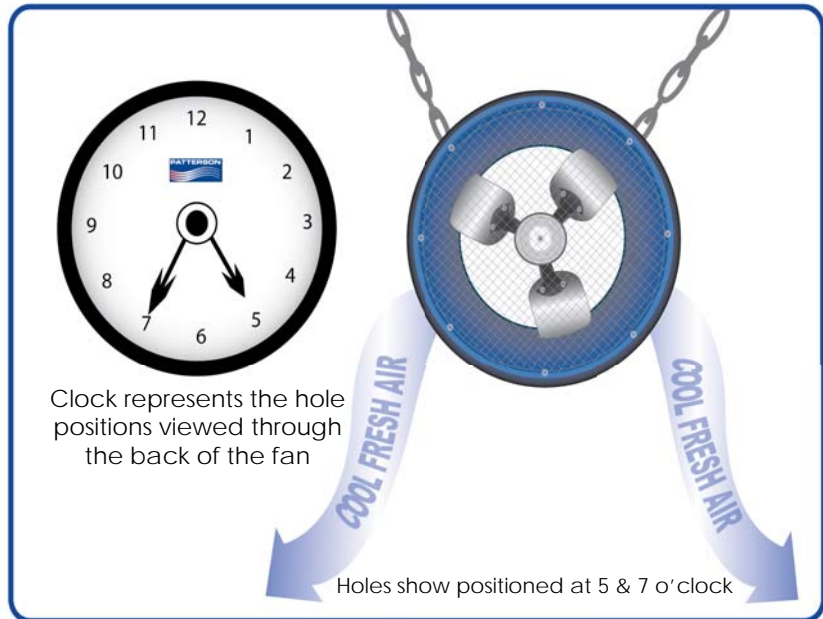

Use the face of the clock to position your Patterson Power Tube holes.

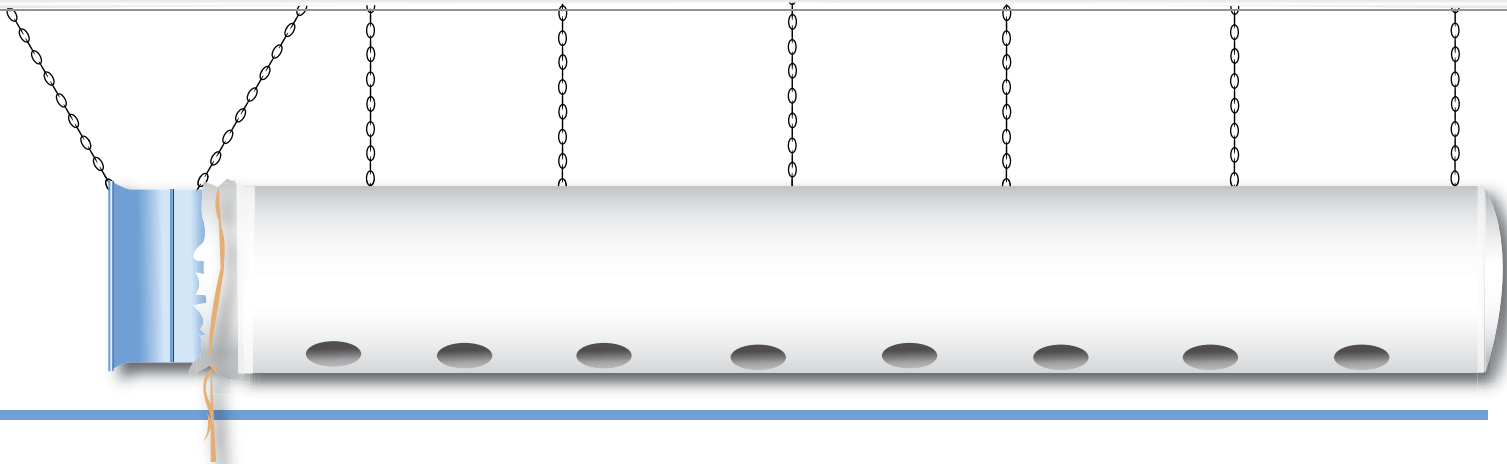

1. Hang fan as specified on HV Ceiling Suspended assembly instructions.
2. Grommets on top edge of tube are spaced 30 inches. Not every grommet will be used.
3. Attach chains to ceiling joist or other solid structure at least one every 7.5 feet. Let them hang down temporarily. Mark the chains as you hang them to insure accuracy of hanging height. Secure them with nuts and bolts.
4. Attach tube to the chains.
5. Attach fan to tube with drawstring.



Note: Do not operate fan if the finger guards are damaged or missing.