

Diagram 1Under Header (Lintel) Position

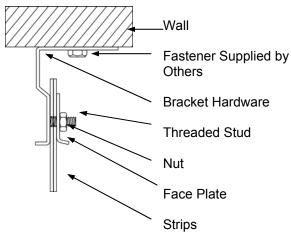


Diagram 2Wall (Header) Position


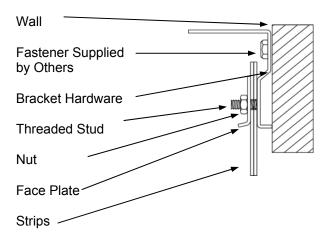


Diagram 3Front View Strip Spacing

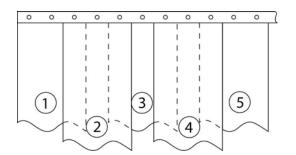

Strip Door Installation Instructions

TOOLS NEEDED


- Pen or Pencil to Mark Drill Holes
- Dril
- 7/16" Diameter Fasteners
- Step Stool or Ladder
- Utility Knife to Cut Strips

IMPORTANT

Prior to installation, **unroll all door strips** and place them on a clean, flat surface in a warm atmosphere for a minimum of twenty-four (24) hours. This will allow the strips to return to their original form.

- Mount the hardware bracket in either the under header or wall position shown in Diagrams 1 and 2 using appropriate fasteners supplied by others (recommended 7/16" diameter).
- 2. Press the door strips onto the threaded studs of the hardware bracket making certain that the concave sides are facing each other (Diagram 4). Attach strip numbers 1 and 3 (see Diagram 3) with concave side toward you, leaving desired spacing between strips as indicated by the diagram on reverse side of this sheet.

Diagram 4



- 4. Attach all of the remaining door strips in the same manner as in Steps 2 and 3 making certain that the concave sides face each other (Diagram 4).
- 5. After all door strips have been attached, the strips should be trimmed to leave ½" of clearance from the floor surface. Your PVC door strips may be trimmed by using a common utility knife to score and then be torn by hand. The door strips need to hang for 24 to 48 hours before final trim to allow for proper alignment.

Distributed by Cisco-Eagle www.cisco-eagle.com

STRIP PLACEMENT GUIDE

PARTIAL OVERLAP **FULL OVERLAP** 6" WIDE **MATERIAL FULL OVERLAP 100%** PARTIAL OVERLAP 66% **8" WIDE MATERIAL** 2" PARTIAL OVERLAP 50% **FULL OVERLAP 100%** 12" WIDE **MATERIAL FULL OVERLAP 100%** PARTIAL OVERLAP 66% (4") PARTIAL OVERLAP 33% (2") 16" WIDE **MATERIAL**

PARTIAL OVERLAP 75% (6") PARTIAL OVERLAP 50% (4") PARTIAL OVERLAP 25% (2") **FULL OVERLAP 100%**