




A DIVISION OF *Leggett & Platt*

Stor-More® Loss Prevention Cabinet 4000 Series Installation Instructions


Providing Reliable Engineered Solutions

TABLE OF CONTENTS:

Page 1	COVER, TOOLS REQ'D
Page 2	SPECIFICATIONS
Page 3	PARTS LIST, AND HARDWARE PROVIDED
Page 4	ASSEMBLY INSTRUCTIONS
Page 5	ASSEMBLY INSTRUCTIONS (CONTINUED)
Page 6	ASSEMBLY INSTRUCTIONS (CONTINUED)

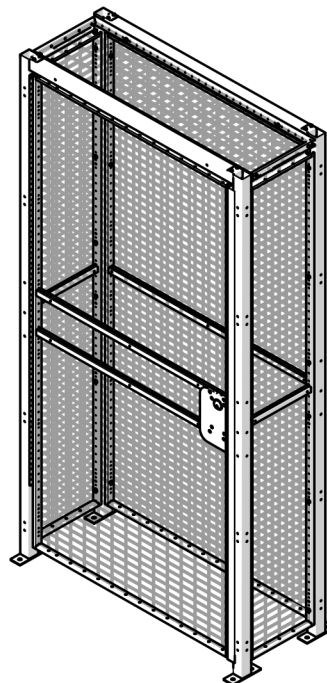


TOOLS REQUIRED:

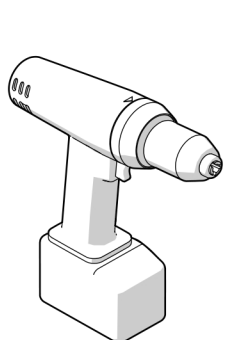


BATTERY DRILL




5/16"
[8mm]

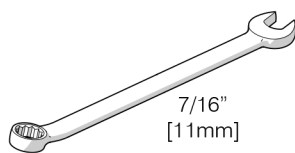


7/16"
[11mm]
OPEN END WRENCH

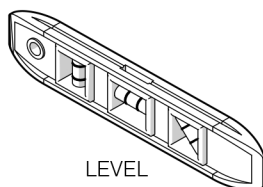


LEVEL

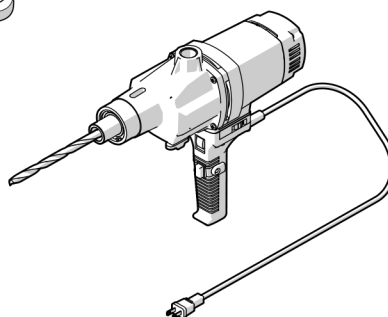



HAMMER DRILL WITH
Ø 5/16" BIT
[8 mm]

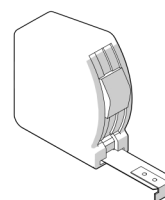

MEASURING TAPE




HAMMER

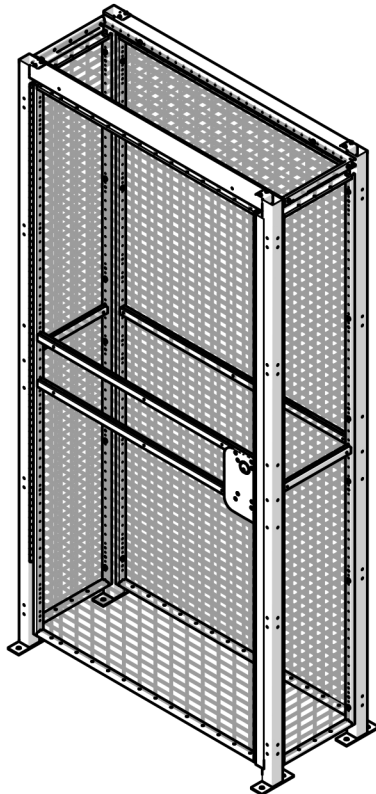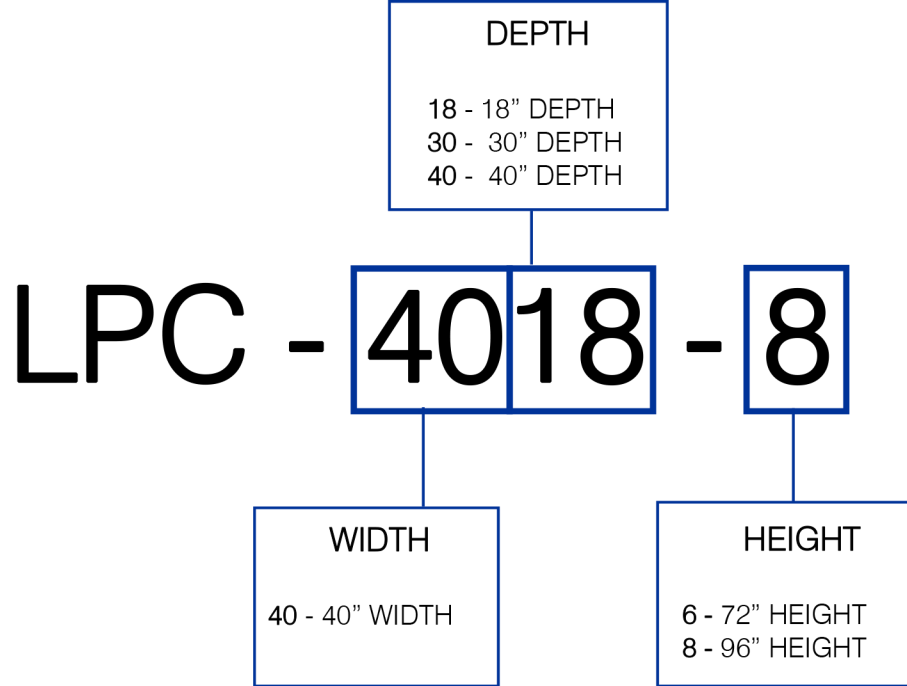


PART NO.	WIDTH	DEPTH	HEIGHT
LPC-4018-6	40"	18"	72"
LPC-4030-6	40"	30"	72"
LPC-4040-6	40"	40"	72"
LPC-4018-8	40"	18"	96"
LPC-4030-8	40"	30"	96"
LPC-4040-8	40"	40"	96"

PARTS LIST:


DOOR: SIDE: REAR: HEADER BAR:

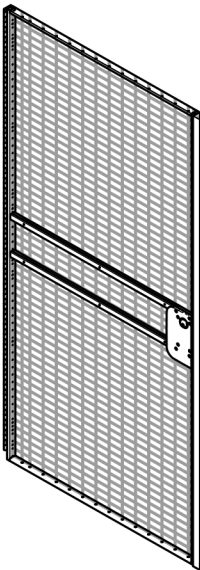


x1



x2

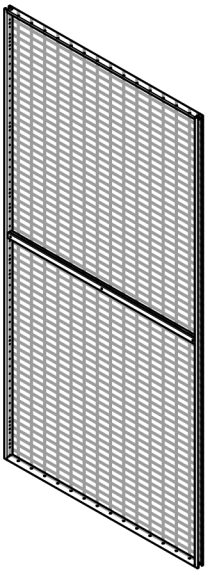


x1

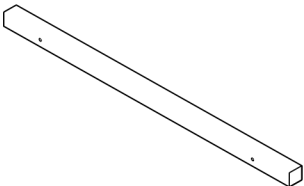

x2

TOP:

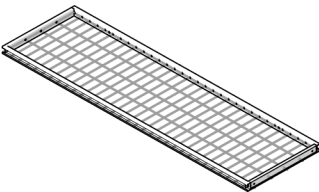


x1

POST: HARDWARE KIT:


HARDWARE PROVIDED: KT089



x4

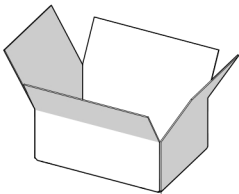


x1

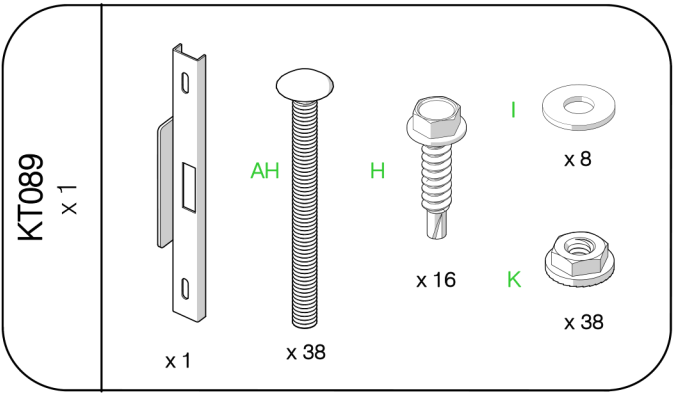

HARDWARE LIST:


- (H) #12-14 x 1" HEX HEAD SELF-DRILLING SCREW
- (I) 1/4" FLAT WASHER
- (K) 1/4"-20 FLANGE NUT
- (AH) 1/4"-20 x 3" SQUARE NECK CARRIage BOLT

1

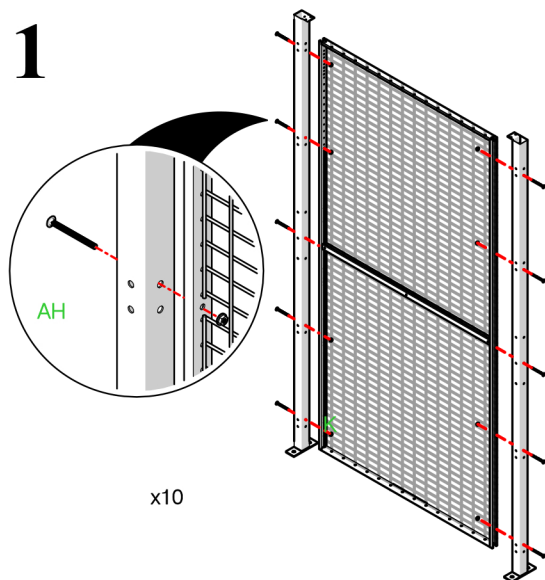

x10


2

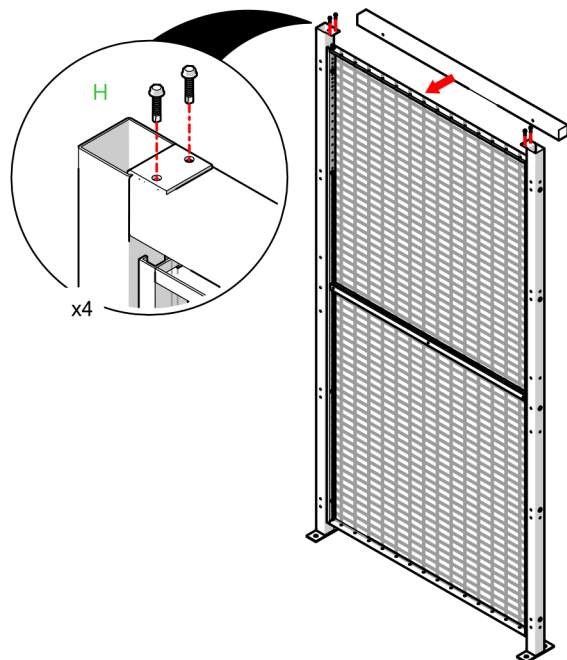

x4


NOTE: DO NOT TIGHTEN ANY NUTS, FULLY TIGHTEN AFTER LAST STEP

3

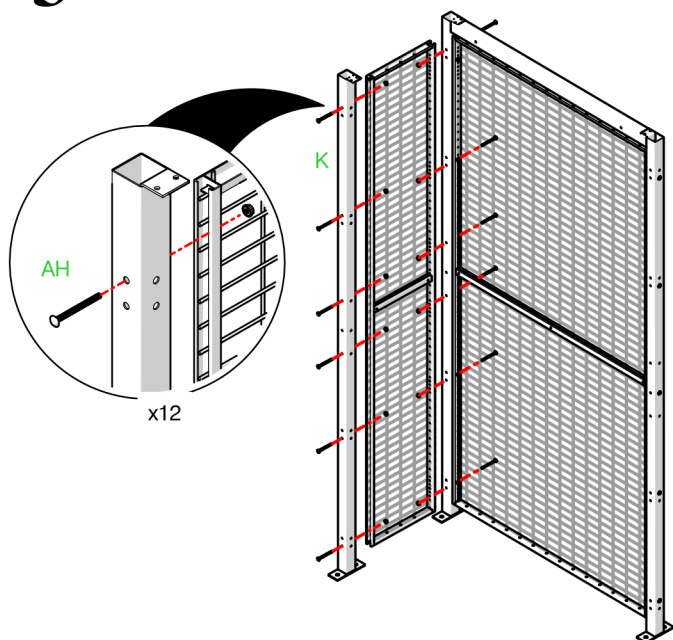

x12


4

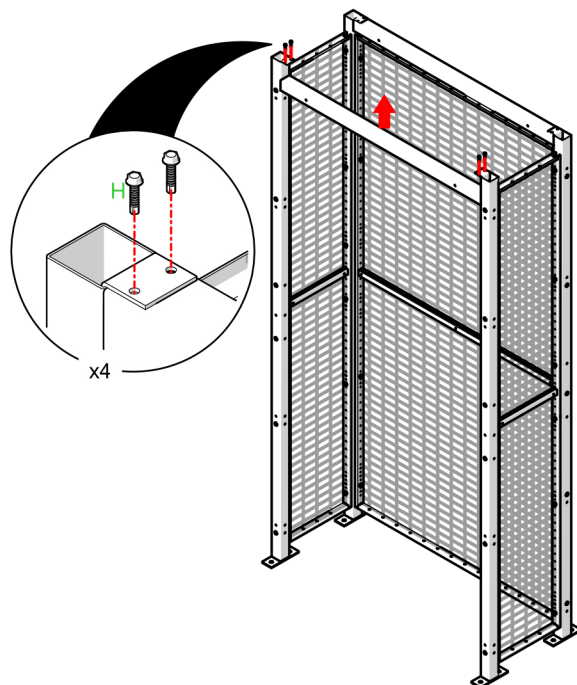


x4

NOTE: REPEAT STEP 3 FOR OTHER SIDE ASSEMBLY


5

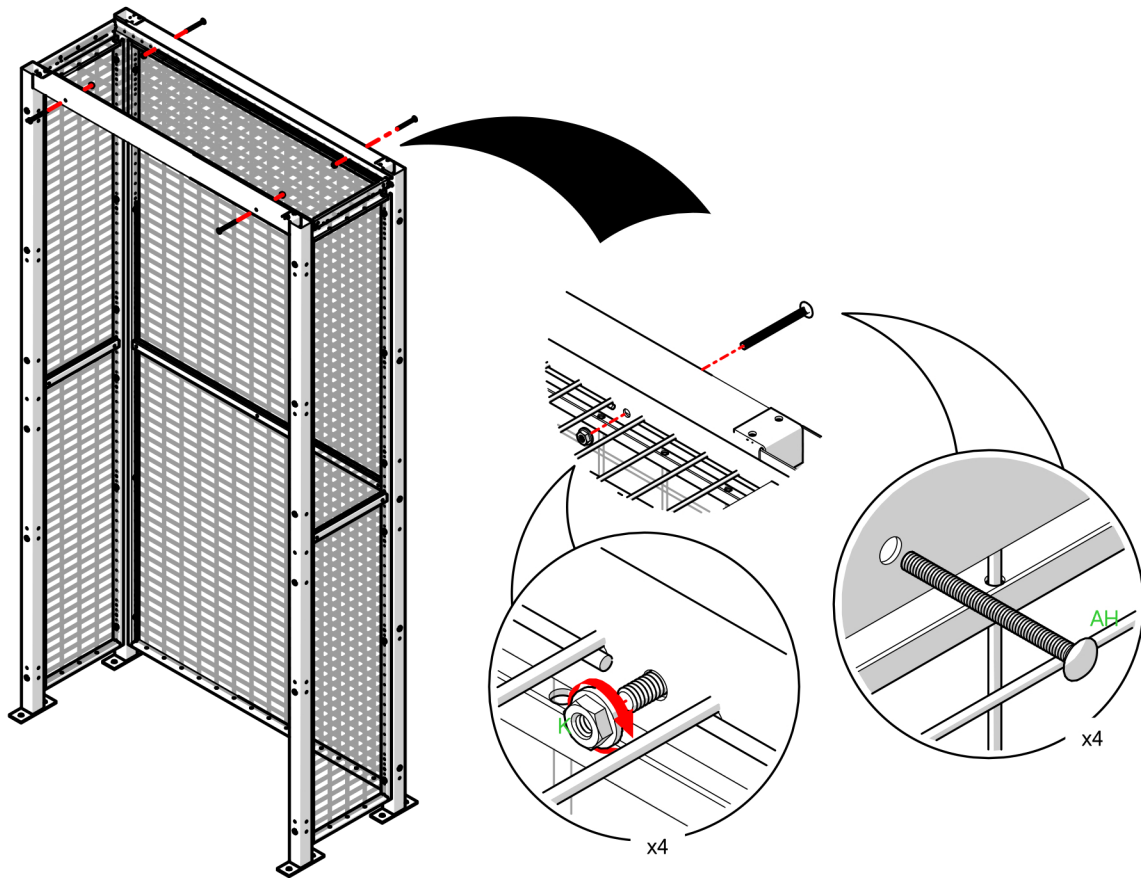


6

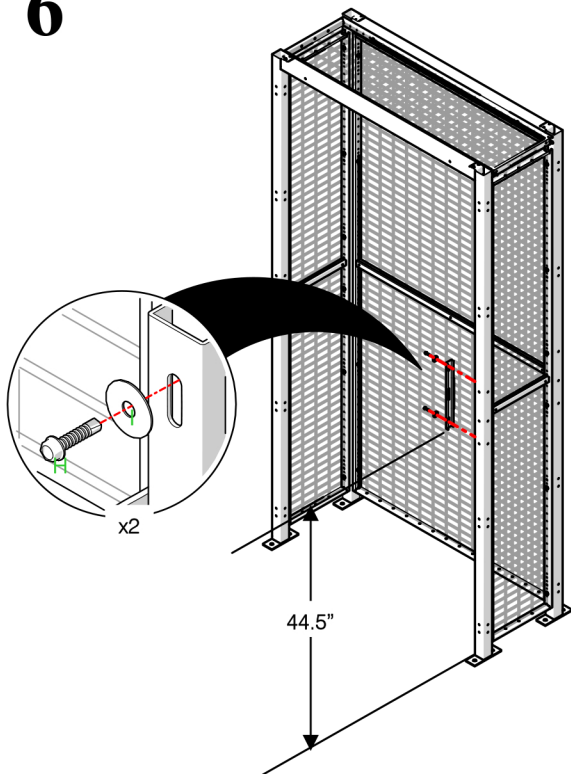

7

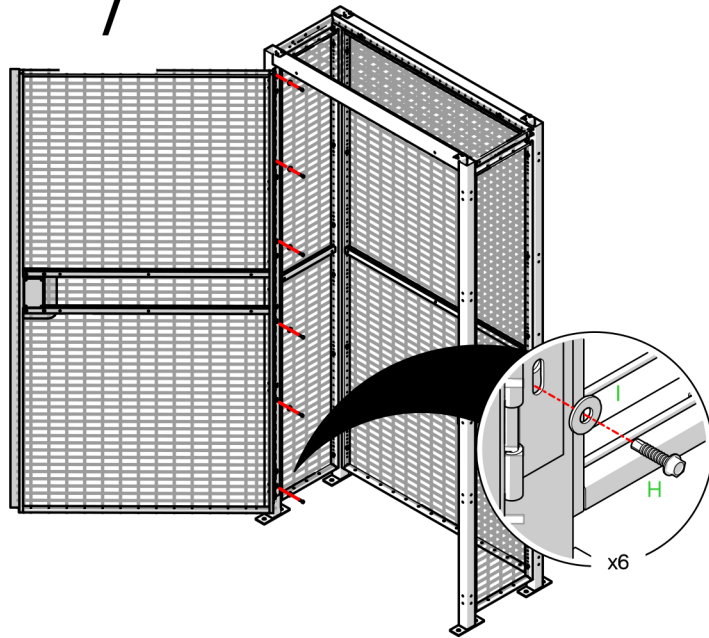


8

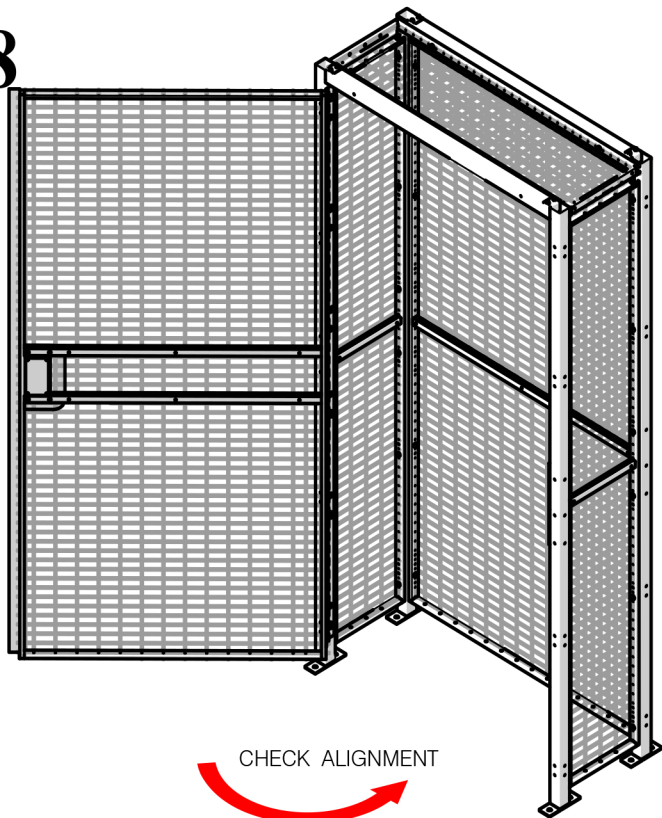


CHECK ALIGNMENT

NOTE: FULLY TIGHTEN ALL NUTS



9*

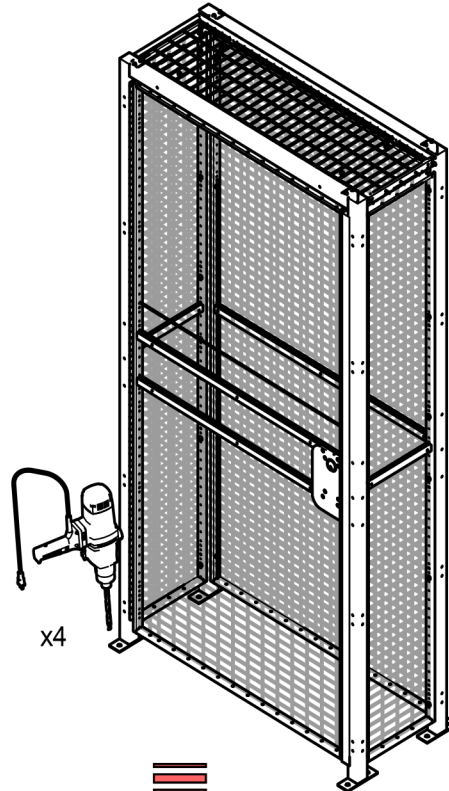

10*

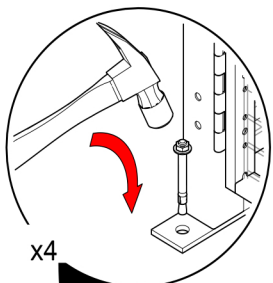

x4

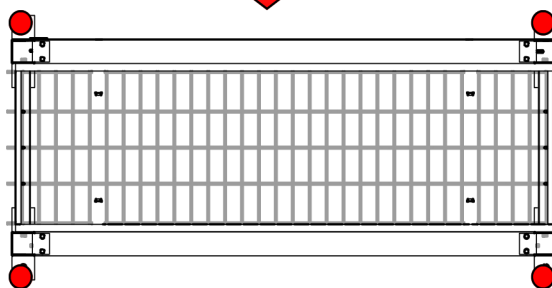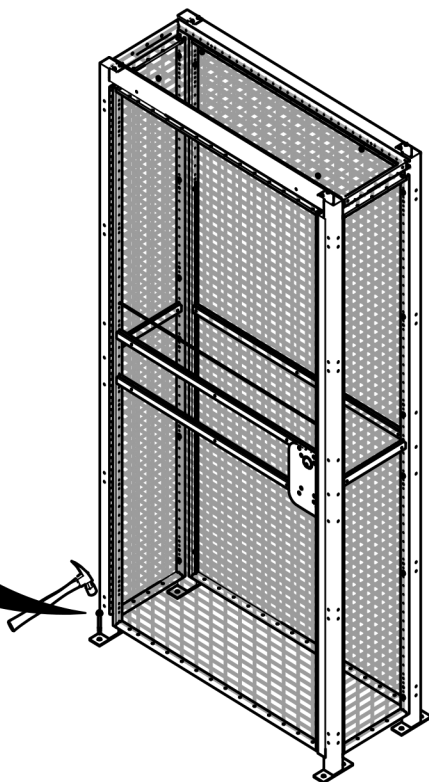

*NOTE: FLOOR ANCHORS (3/8" x 3-3/4" WEDGE ANCHORS) ARE OPTIONAL
AND ARE NOT SUPPLIED