

# HOW TO FIT GENIEGRIPS® STIK-IT PADS



## STEP 1:

### Wash & Prepare Tines

Wash tines with alcohol wipe or equivalent solution. The surface to which the tape is applied must be clean, dry, free of grease, oil or other contaminants.



## STEP 2:

### Measure Tine Length & Width


Measure the tine length and width. The Pads measure at 100mm (4") wide and 1150mm (45") long.



## STEP 3:

### Trimming the Pad

If tine is less than 1150mm (45") the Pad will need to be trimmed. The Pad can be cut using scissors or utility knife. Cut length to tine measurement in Step 2.

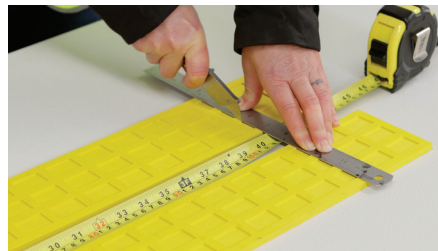

## STEP 4:

### Adding a Pad for Length

If tine is longer than 1150mm (45") in Step 2. Butt up the thick ends of the Pad and trim second Pad as required.



## STEP 5:

### Adding a Pad for Width

The Pads can be used side by side if your tine measures 200mm (8") or wider.



## STEP 6:

### Sticking Pad onto Tine

Place Pad onto tine, remove the tape from the tip of the Pad and slowly peel towards the forklift.



## STEP 7:

### Guide Pad onto Tine

As the tape is being peeled from the underside of Pad, use your hand to guide the Pad onto the tine.



## STEP 8:

### Finish Install

Press down on the Pad to ensure the Pad is stuck firmly to the tine.



## STEP 9:

### Before Use

While the Pads are ready to use immediately, ideally allow an hour for maximum adhesion before use.



Distributed by Cisco-Eagle, Inc.  
[www.cisco-eagle.com](http://www.cisco-eagle.com)  
888-877-3861