

Bumper Post Sleeve Installation Instructions

What You Will Receive:

- Designated number of Bollard Covers
- Two pieces of neoprene tape for each Bollard Cover

Installation Instructions:


1. Remove the back of the first adhesive tape strip and wrap it firmly around the top of the post, approximately 6" from the top. Make sure to leave a 1" gap between the ends of the tape to allow airflow while installing the cover.



2. Remove the back of the second adhesive tape strip and wrap it firmly around the bottom of the post, approximately 6" from the bottom.



3. With the tape in place, slowly slide the Ideal Shield Bollard Cover over the post. If the tape is applied correctly, you will hear air being forced out while sliding it down the post, creating a vacuum seal.

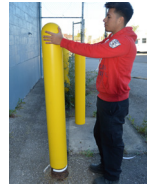

4. The Ideal Shield Bollard Cover should securely fit over the full length of the post.



THANK YOU FOR YOUR ORDER!

Distributed by:
Cisco-Eagle

www.cisco-eagle.com | 888-877-3861