





FixedMount®

Parts List:

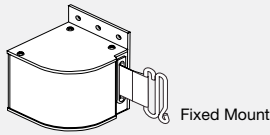

Required Tools

1. Familiarize yourself with all parts provided for assembly of unit to slotted upright.
2. Position unit behind slotted upright. Insert Wing Nut on slotted upright. Rotate Wing Nut making sure it rests on both sides of slotted uprights. *See Figure A.*
3. Insert 1" bolt. *See Figure B.*
4. Tighten bolt with screwdriver. *See Figure C.*
5. Pull belt across aisle to connect with another slotted upright. *See Figures D and E.*

