
Proper Usage and Installation for Lista drawer cabinets



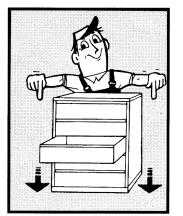


Any free-standing Lista cabinet must be fastened to the floor.




Cabinets in a row should be bolted together through the sidewalls. The endwalls should be fastened to the floor (see #3 below). For the side-to-side bolt kit, ask for **Part No. SS-KIT.**

ALWAYS BOLT CABINETS SIDE-TO-SIDE OR ANCHOR TO THE FLOOR BEFORE LOADING TO PREVENT CABINET TIPPING.

Mounting hardware is available free of charge on request by calling Lista Customer Service at **1-800-722-3020.**

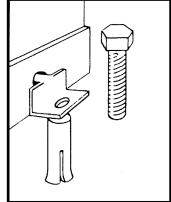

For cabinets with no base, fork truck base or frame base, insert angle piece into hole in bottom. For the floor bolt kit, ask for **Part No. X1141-1.****

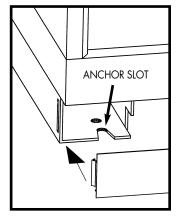


- Alternate anchoring for cabinets with fork truck base: properly anchor base to floor at front and back using the slots indicated.
 - Properly position rear anchors and bolts (customersupplied), allowing enough clearance to slide the cabinet into position.
- Install front anchors.




- * SS-KIT includes (4) each nuts and bolts.
- ** X1141-1 includes (2) fastening brackets, anchors, hardware and installation instructions.

Proper Usage for Lista drawer cabinets

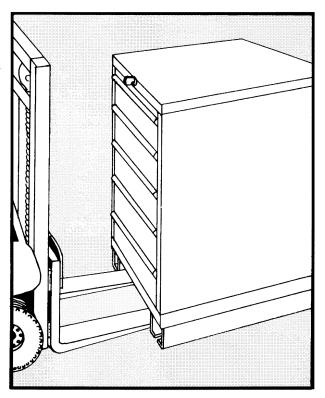

All Lista cabinets should be locked while moving.

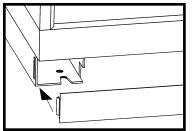

Base cover plate easily snaps on and off to allow for pick-up by fork or pallet truck.



Do not step into an open drawer.



Open only one drawer at a time.



Do not sit on an open drawer.



The load capacity per drawer (as shown in the catalog) is designed for evenly distributed loads.



Lista International Corporation

106 Lowland Street, Holliston, MA 01746 U.S.A. (508) 429-1350 • (800) 722-3020 Fax: (508) 626-0353 sales@listaintl.com • www.listaintl.com



Do not drop any heavy loads into a drawer.



All cabinets should be secured to prevent tipping.