


# ASSEMBLY INSTRUCTIONS

1. REFER TO LYON SHELVING ASSEMBLY INSTRUCTIONS 9307-DA FOR THE INITIAL ASSEMBLY OF THIS COUNTER SHELVING EXCEPT USE COUNTER HIGH UPRIGHTS.
2. AT THE TOP USE A COUNTER TOP INSTEAD OF A SHELF. IN ATTACHING THE COUNTER TOP TO THE UPRIGHT ASSEMBLY, NOT THAT THE BOLT AND NUT ARE USED INSTEAD OF A SHELF CLIPS AND THAT ENDS OF FLANGES OF THE COUNTER TOP FIT INSIDE THE TEES.
3. AT EACH END OF THE COUNTER TOP, ATTACH A COUNTER TOP FINISHING END.  
**NOTE:** WHEN INSERTING THE BOLTS THROUGH THE FINISHING END, SLIP A STEEL BUSHING OVER EACH BOLT. IF THE COUNTER IS TO HAVE BACKS, THEY ARE INSTALLED AS DESCRIBED FOR SHELVING EXCEPT THE TOP OF THE BACK IS TO BE ATTACHED TO AN ANGLE WHICH IS WELDED TO THE UNDER-SIDE OF THE TOP. USE SHEET METAL SCREWS.

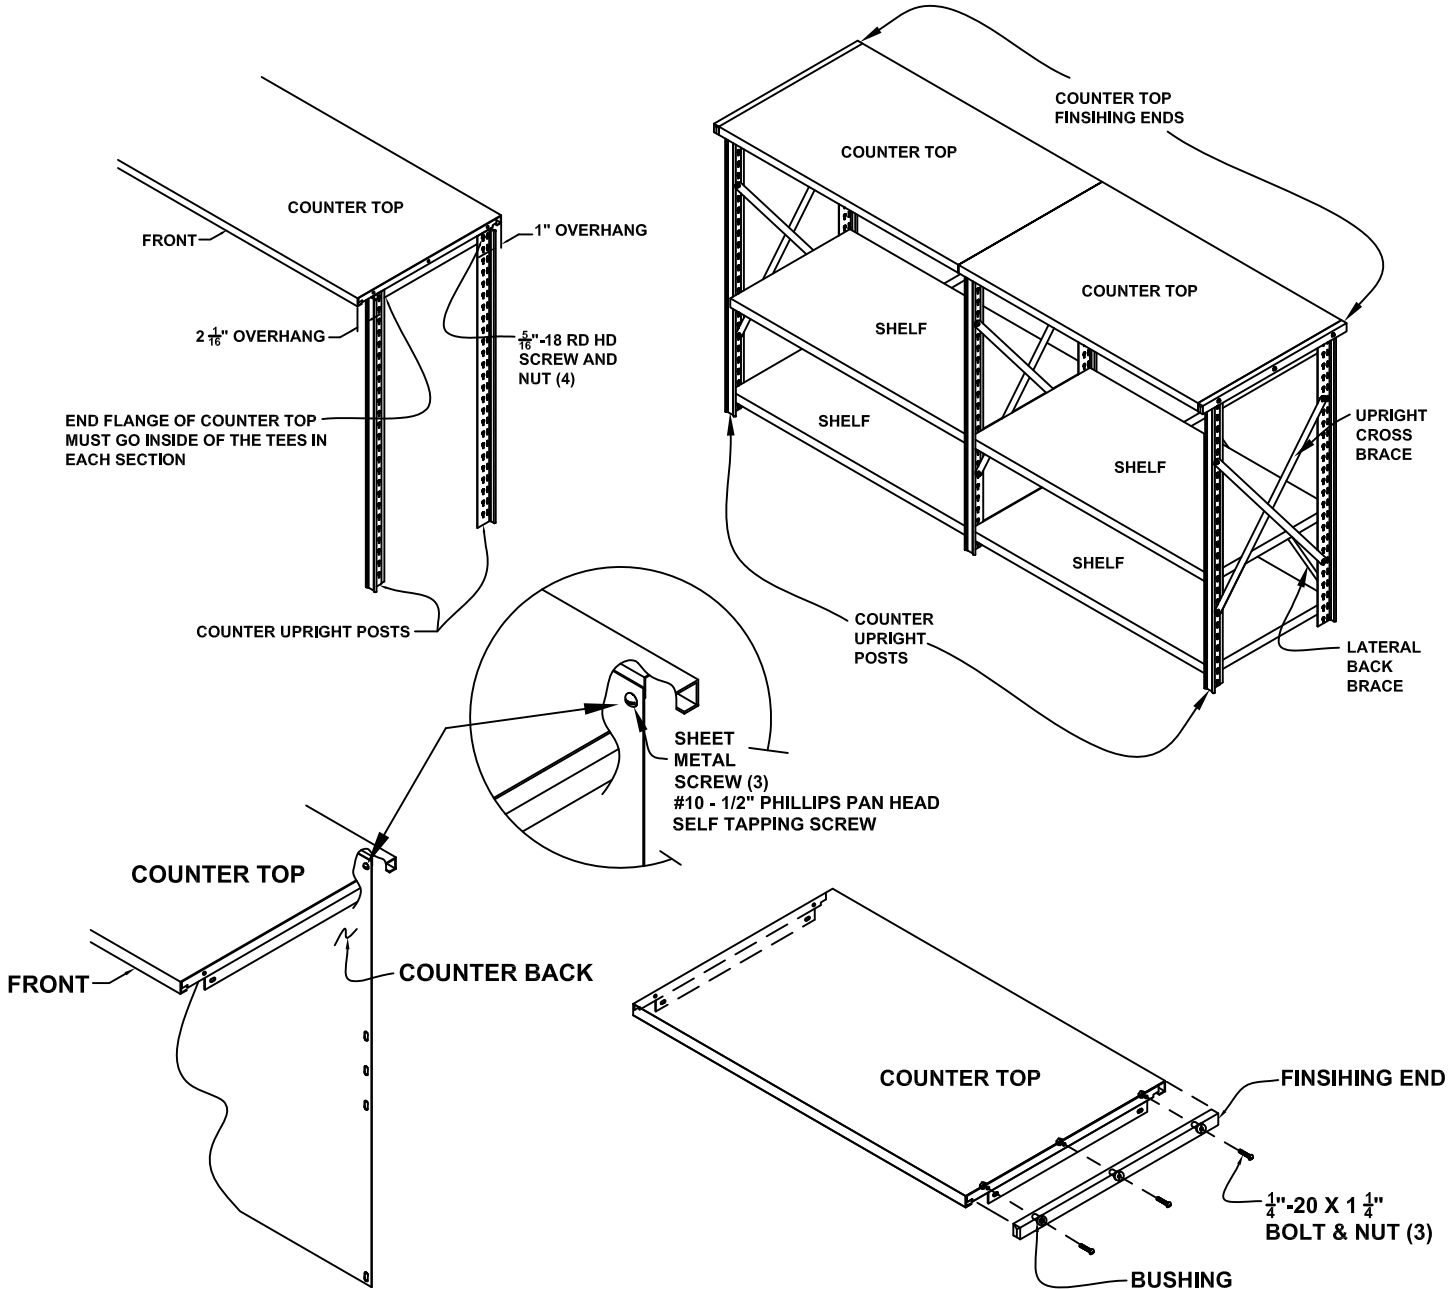

***IN NEED OF  
ASSEMBLY ASSISTANCE?***

Contact us direct for fast friendly service (800) 433-8488

Int'l calls (630) 892-8941 | WEB: WWW.LYONWORKSPACE.COM | Fax (800) 367-6681

ASSEMBLY INSTRUCTIONS  
FOR LYON  
8000 SERIES COUNTER  
SHELVING

**LYON** LYON WORKSPACE PRODUCTS  
P.O. BOX 671  
AURORA, IL 60507

**9317DA**

SHEET 1 OF 1