



Crash Barrier


INSTALLATION INSTRUCTIONS

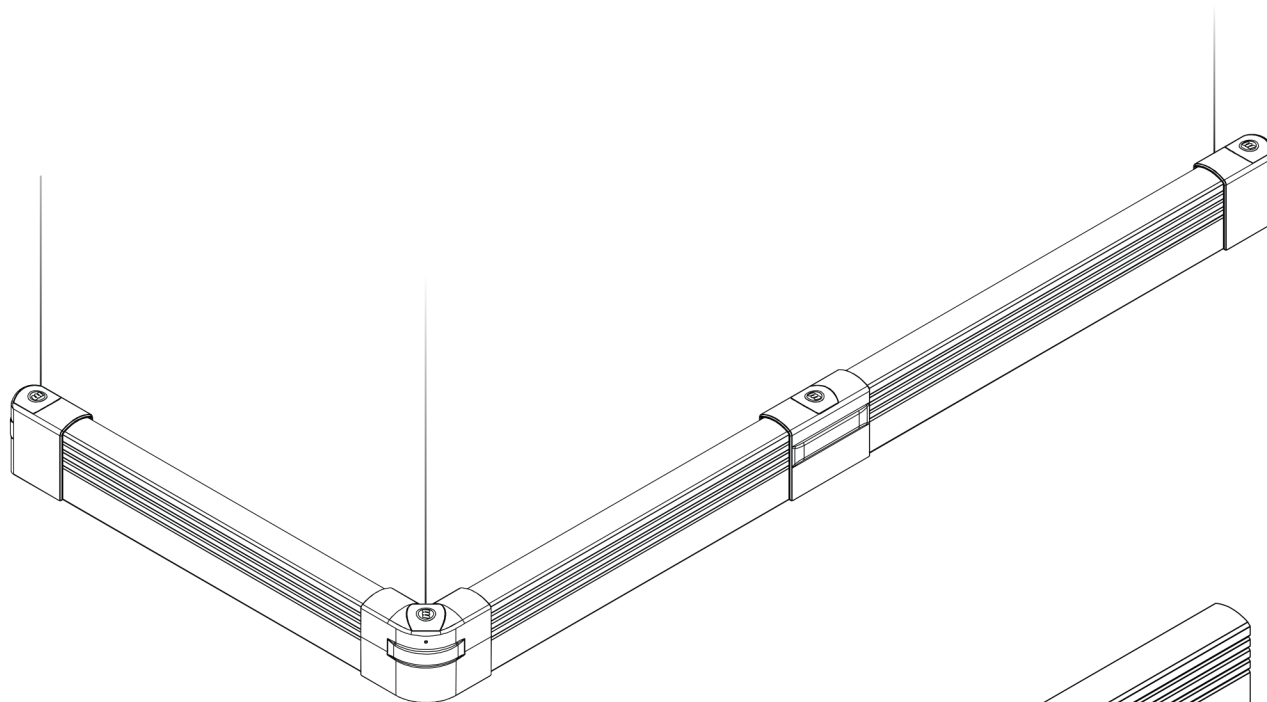


Components (varies by installation)

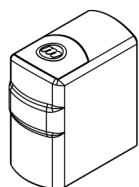


Crash Rail
End

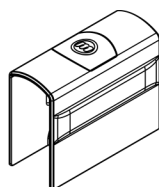


Crash Rail
Mid

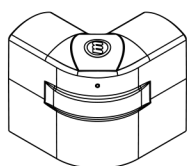

Crash Rail
Corner


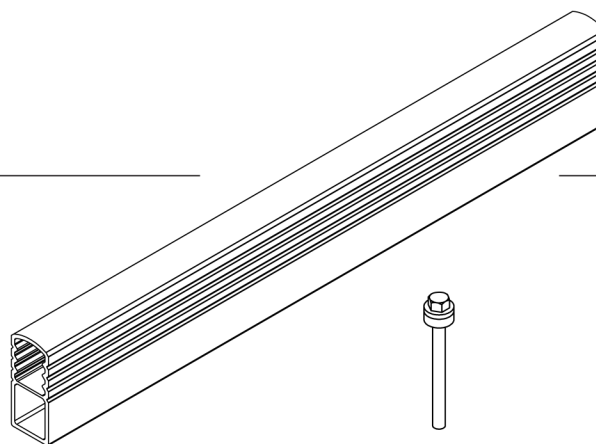


Barrier




20mm (3/4 in)
Shock-Absorbing
Anchor Kit
(2 per each steel part)

Tools Required

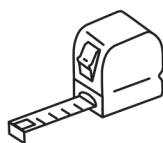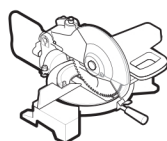

16mm (5/8 in)




24mm (15/16 in)







1

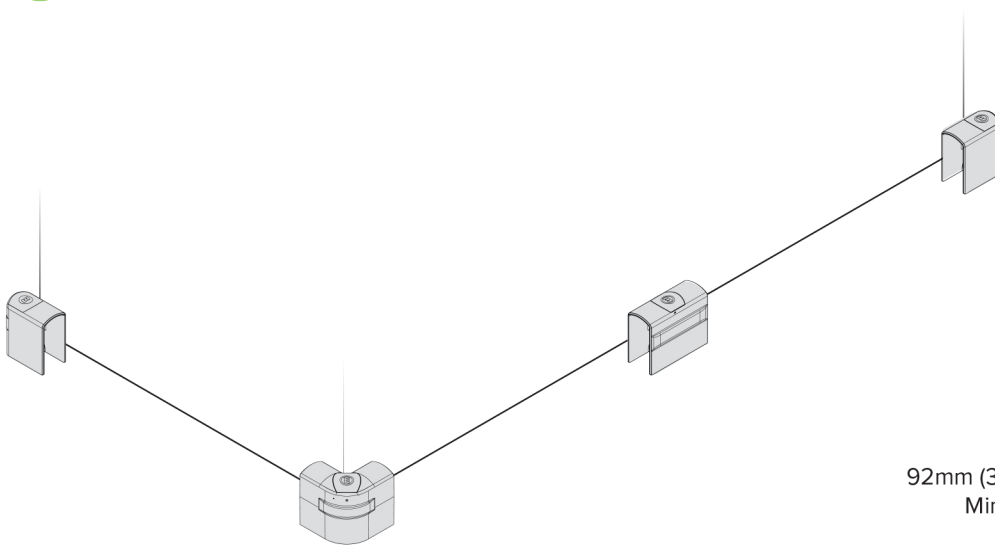


TOP VIEW

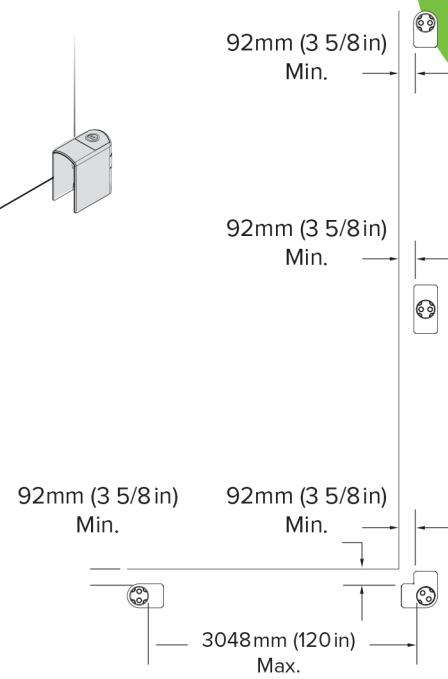

2

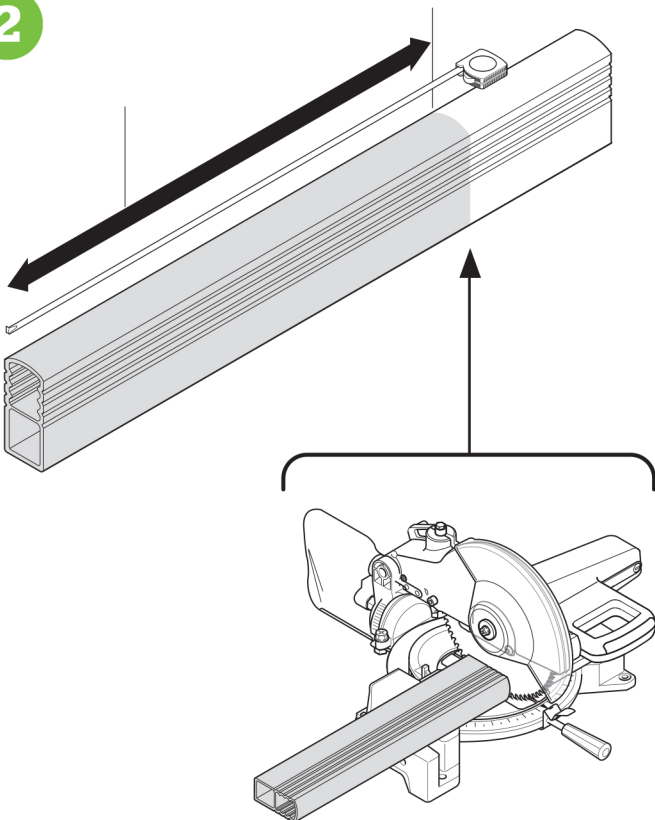


TOP VIEW

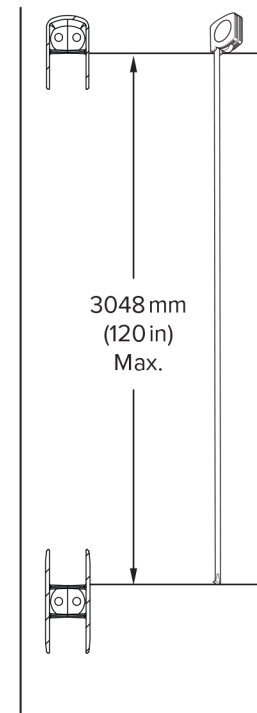





3

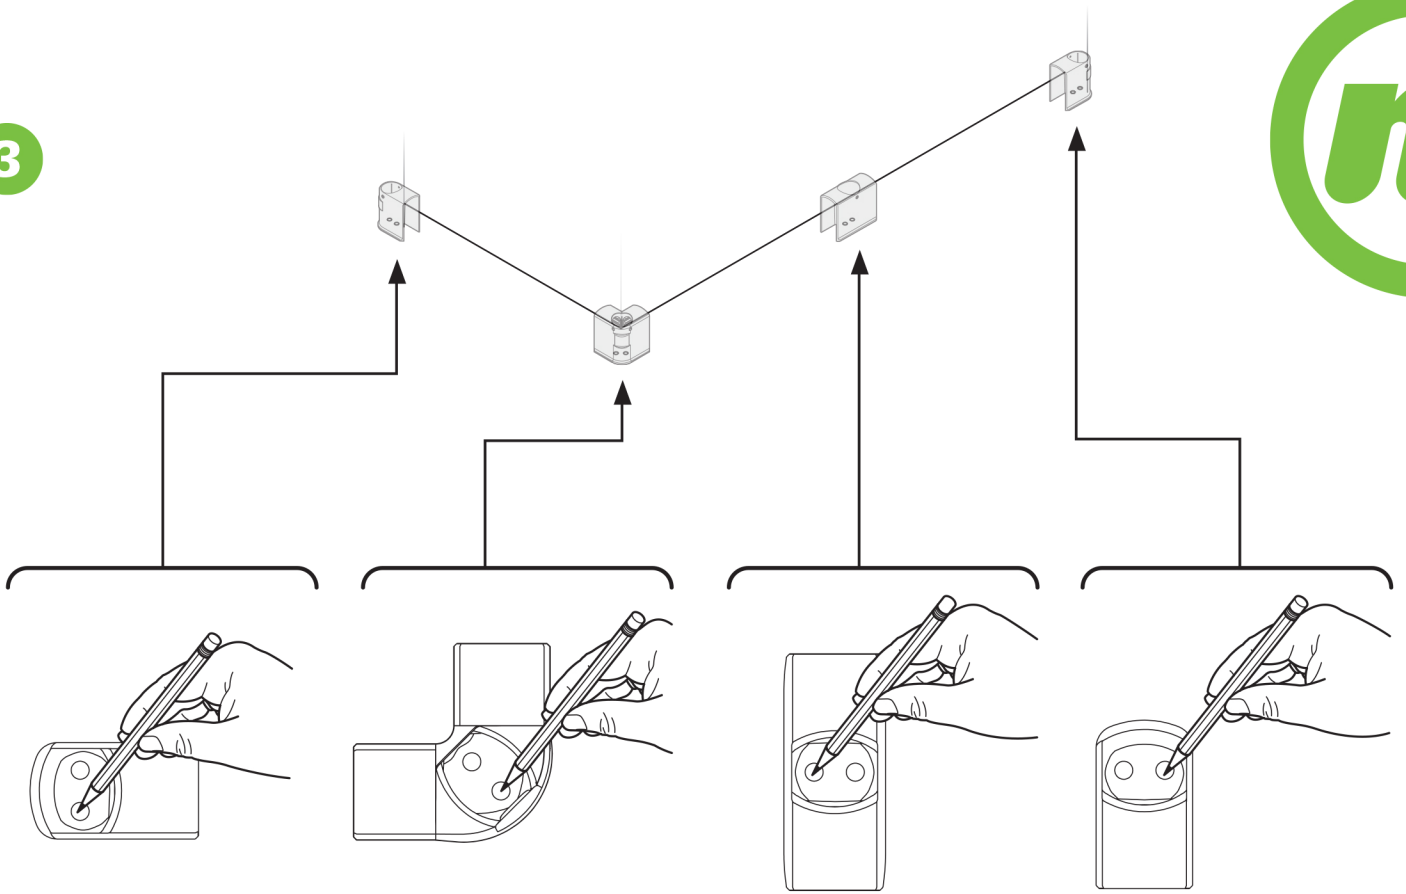


4

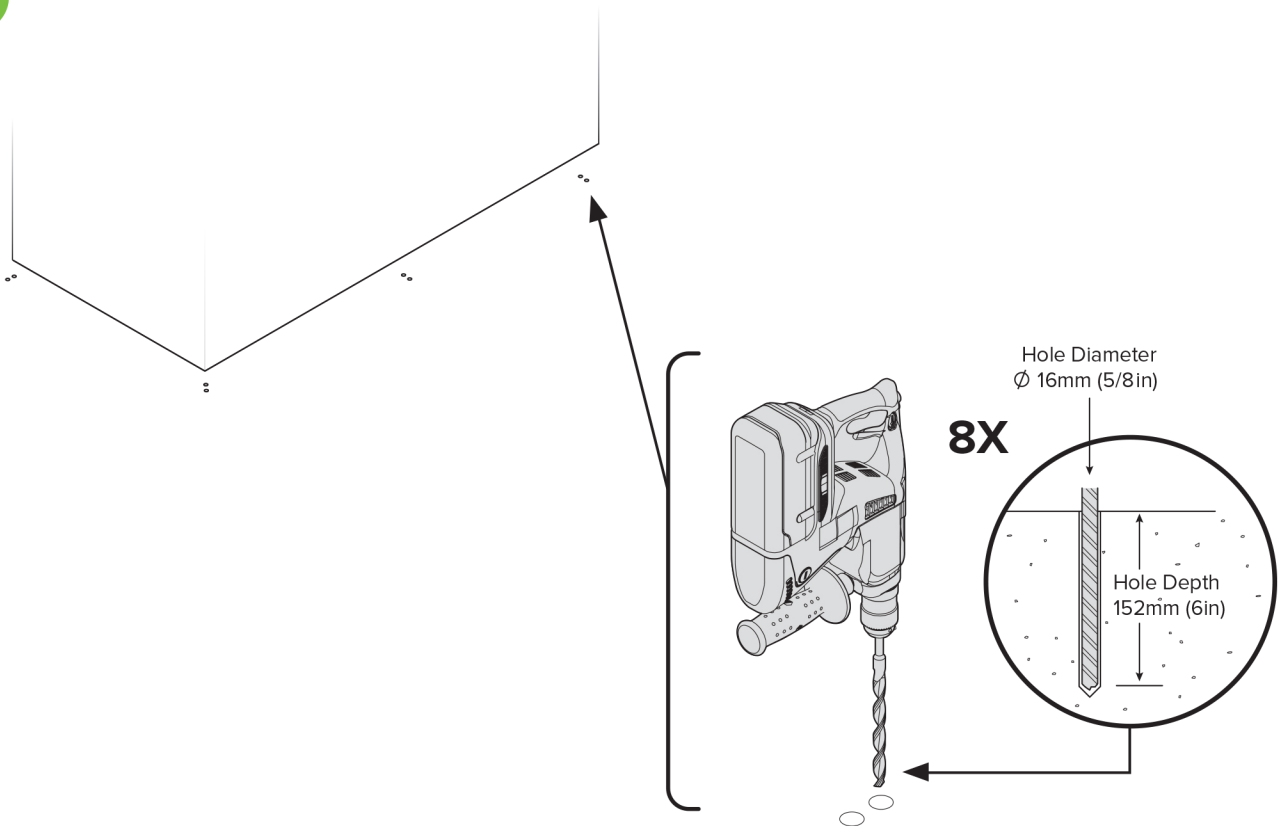


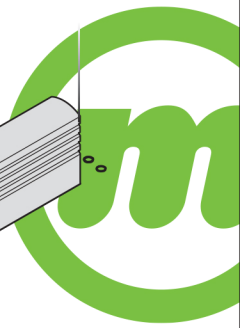

5

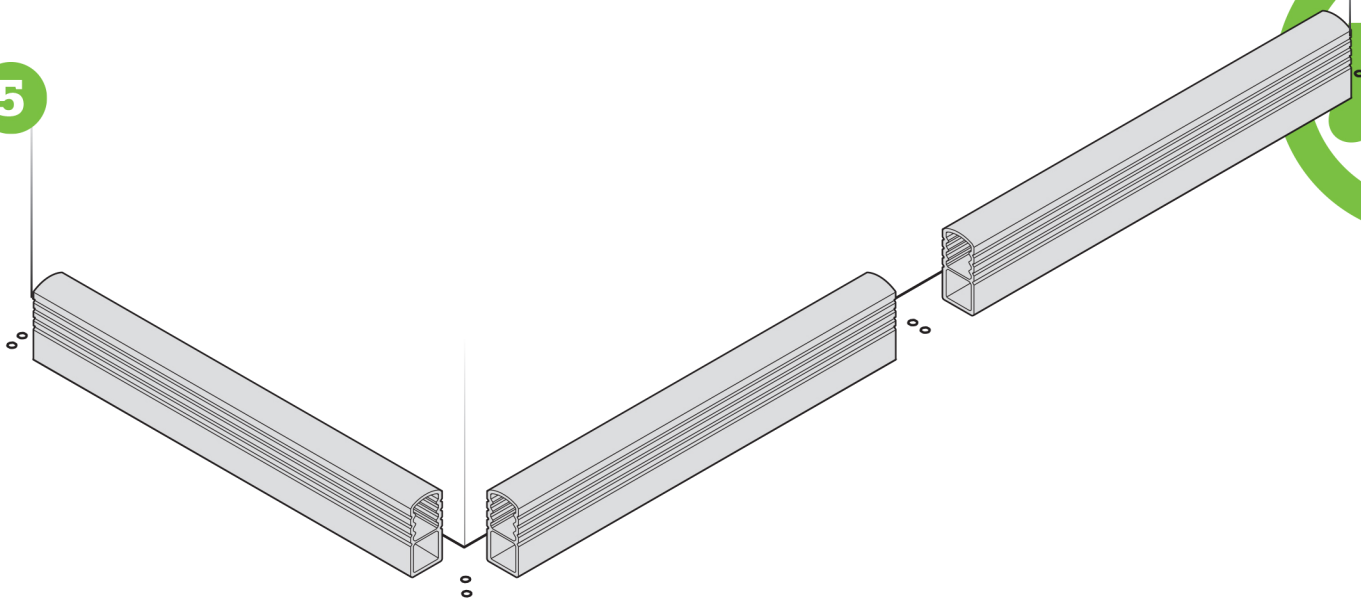


6

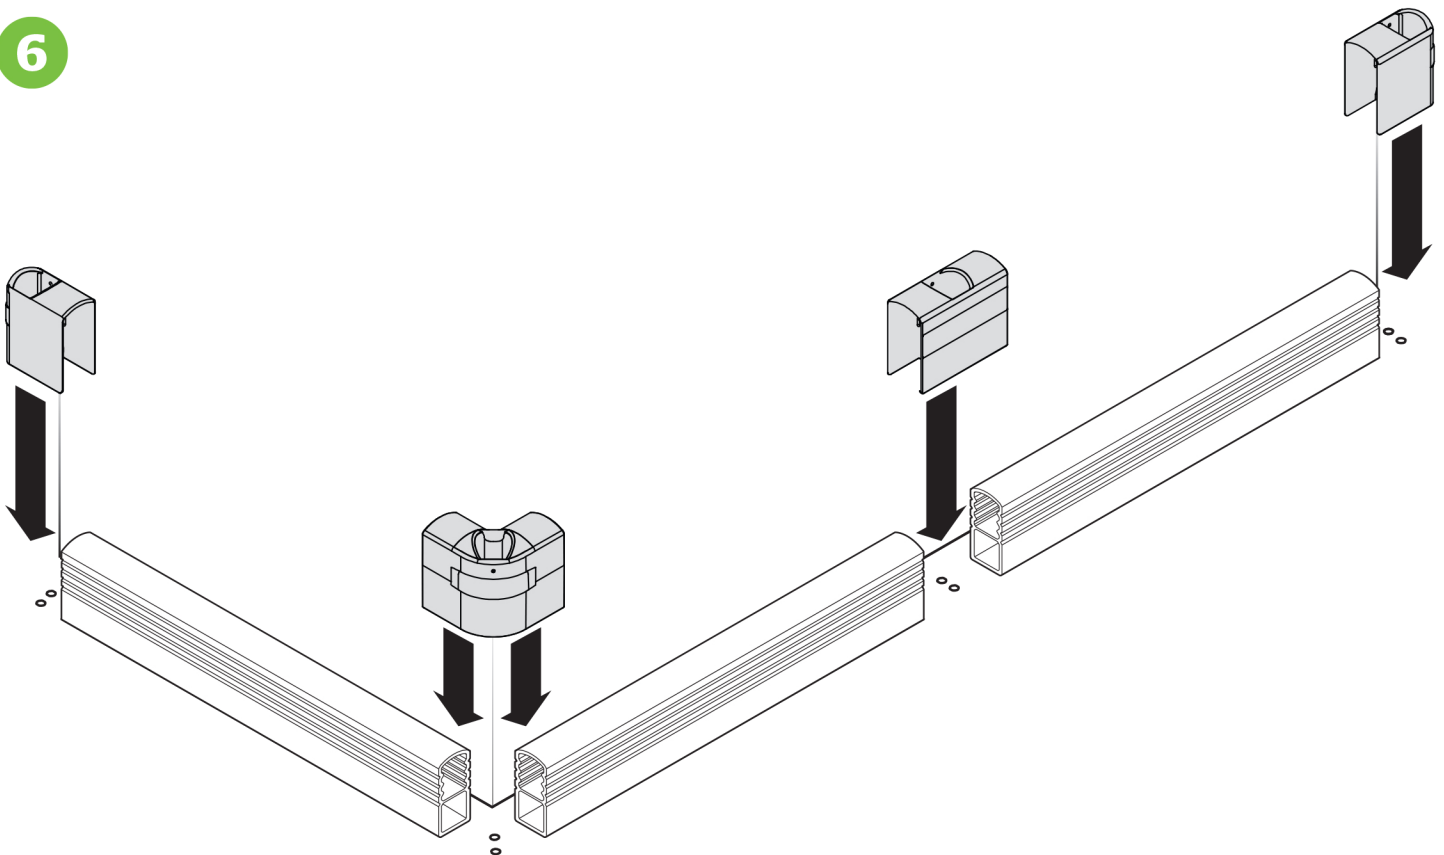





7

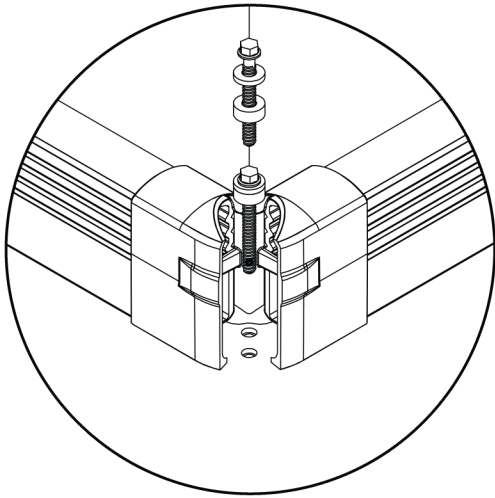

8

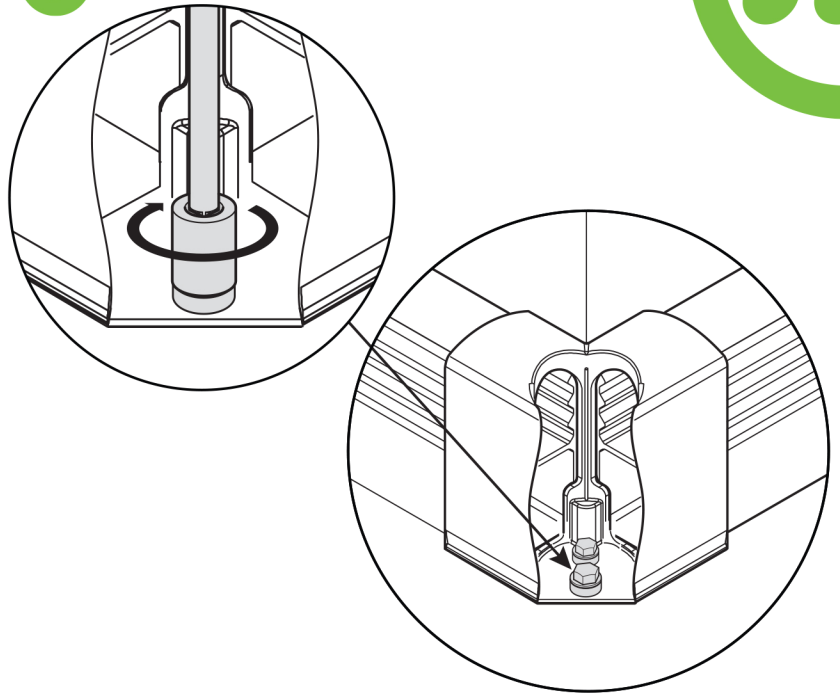

9

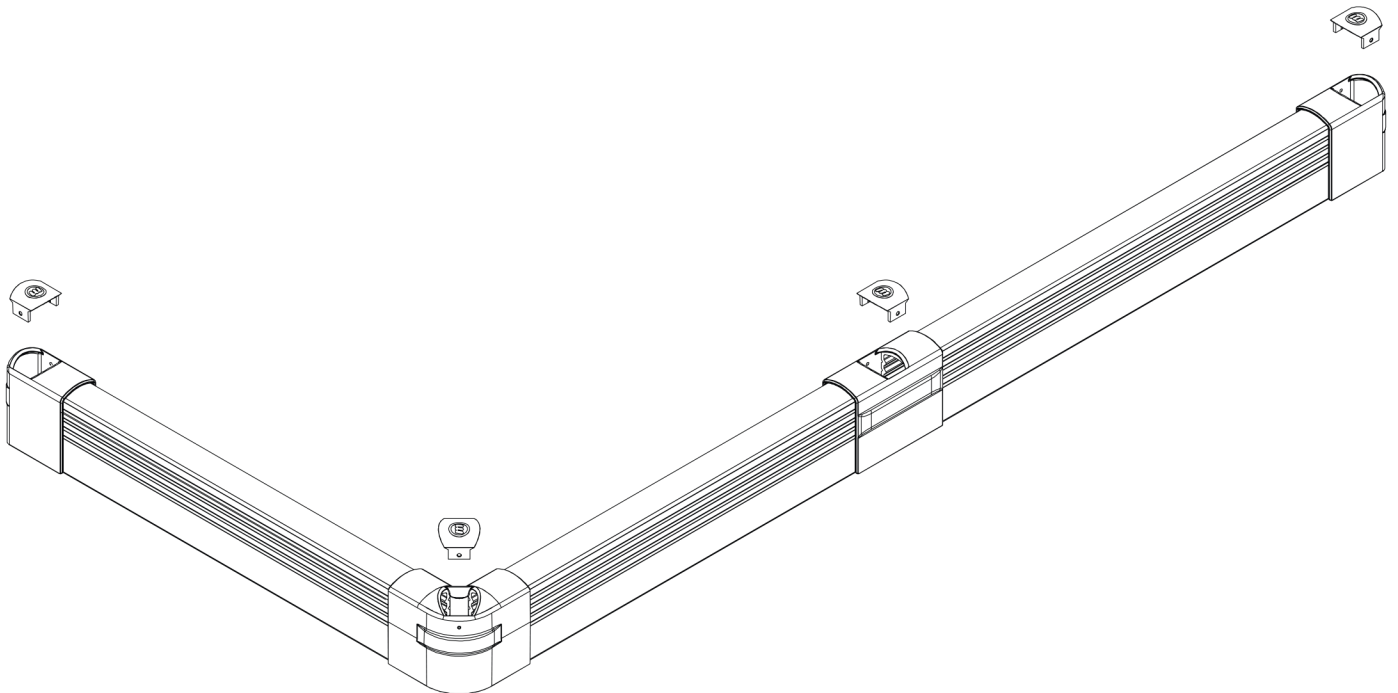

10

