


INSTALLING KWIK-KILP™ DIVIDER US PATENT # 5,437,380


STEP 1

CENTER KWIK-KLIP ON DECK.
HOOK KLIP ON WIRE TO BE USED
TO HOLD DIVIDER. (AS SHOWN)

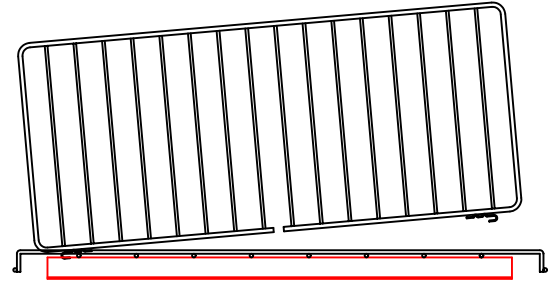


STEP 2

PULL ON MAINFRAME GENTLY TO
SPREAD FRAME APART.

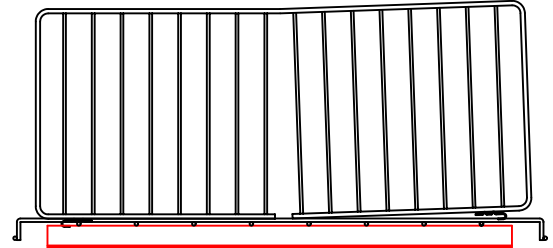


STEP 3

LOWER DIVIDER ONTO THE DECK
AND RELEASE DIVIDER

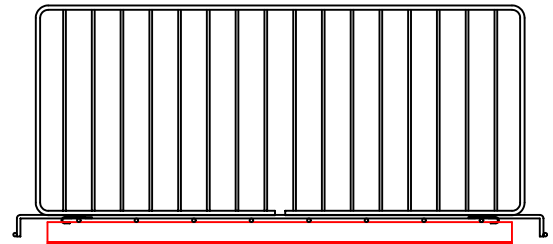


STEP 4

SECURE WITH CABLE TIE
TO PREVENT MOVEMENT.

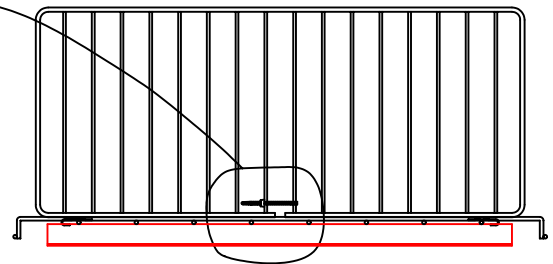

STEP 5

TO RELOCATE, SLIDE
CABLE TIE TO TOP AND
REVERSE ABOVE INSTRUCTIONS

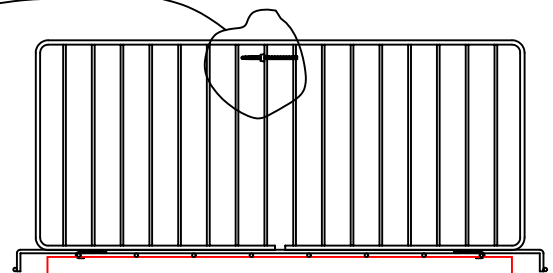

NashvilleWire

PRODUCTS