

Finishing and perforated panel SH Line

Assembly Guide




Panneaux de finition et perforé Ligne SH

Guide d'assemblage

- All required hardware is included.
- Please check the contents with your packing slip.
- Read instructions carefully.
- Save this document for future reference.
- 99"h and higher : Two people are required for the assembly.


- Toute la quincaillerie requise est incluse.
- Veuillez vérifier le contenu avec votre feuille de livraison.
- Lisez attentivement les instructions.
- Conservez ces instructions pour référence future.
- 99"h et plus : Deux personnes sont requises pour l'assemblage.

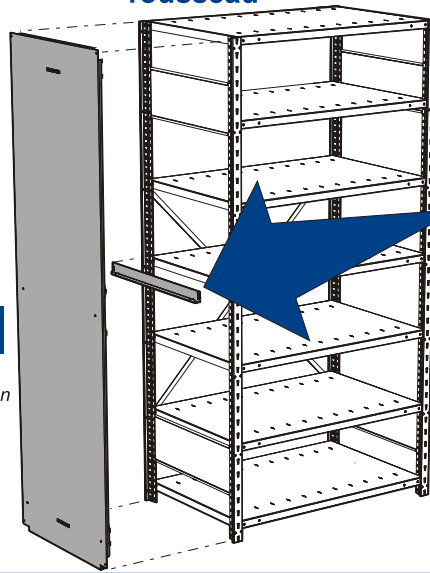

IMPORTANT

This guide is required only for more than 24" deep panel.
Ce guide est requis seulement pour les panneaux de plus de 24" de profond.


Tools Required Outils requis

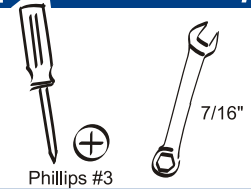

Hardware

Quincaillerie


1/4-20 bolts 1/4-20 nuts Tapping screw Nylon clip
Boulons 1/4-20 Écrous 1/4-20 Vis taraudeuse Attache de nylon
3A1826L2 3S1801Z2 3D1618L2 71011050

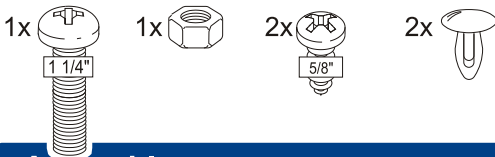

Assembly



Assemblage

Front view Vue de face

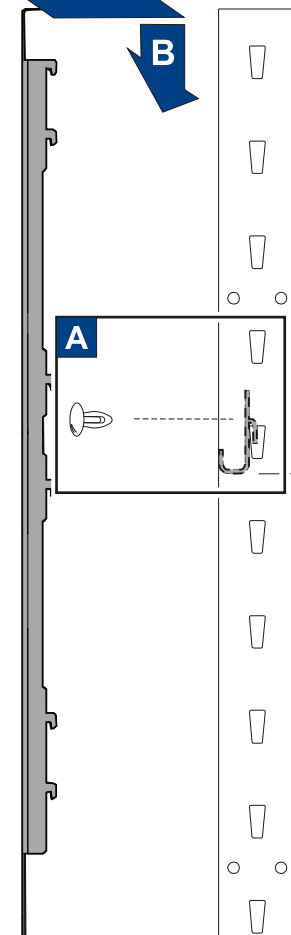


B


1X on each side
1X de chaque côté

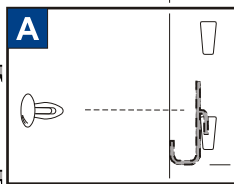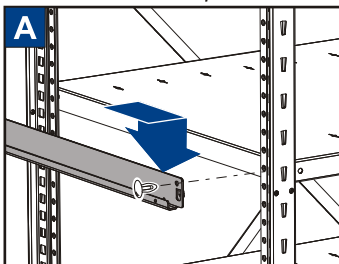


≈ Middle of post (approx.)
Milieu du poteau (approx)

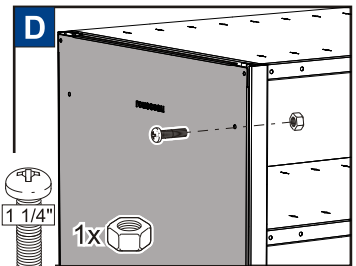

1x 1 1/4"
1x
1X at the top or at the bottom
1X en haut ou en bas

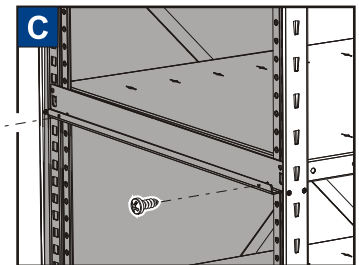

5/8"
1X on each side
1X de chaque côté

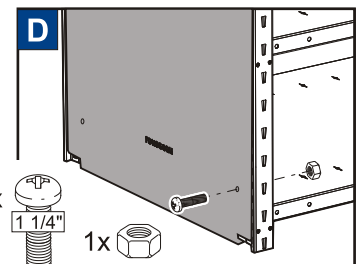

1x 1 1/4"
1x
1X at the top or at the bottom
1X en haut ou en bas