

# DIRECTIONS FOR INSTALLING 270° OMNI-VIEW®

1. Place omni on wall/ceiling where desired.
2. Lightly mark outside dimension of omni.
3. Place 2 hooks 1½" inside marks on wall as shown in figure #2. Place hooks on wall as high as possible.  
The longer spring is provided for the center anchor between #1 and #2.
4. Insert screws into other end of spring and fasten to plastic anchor on back (in foam) of dome.
5. Attach springs to hooks on wall.

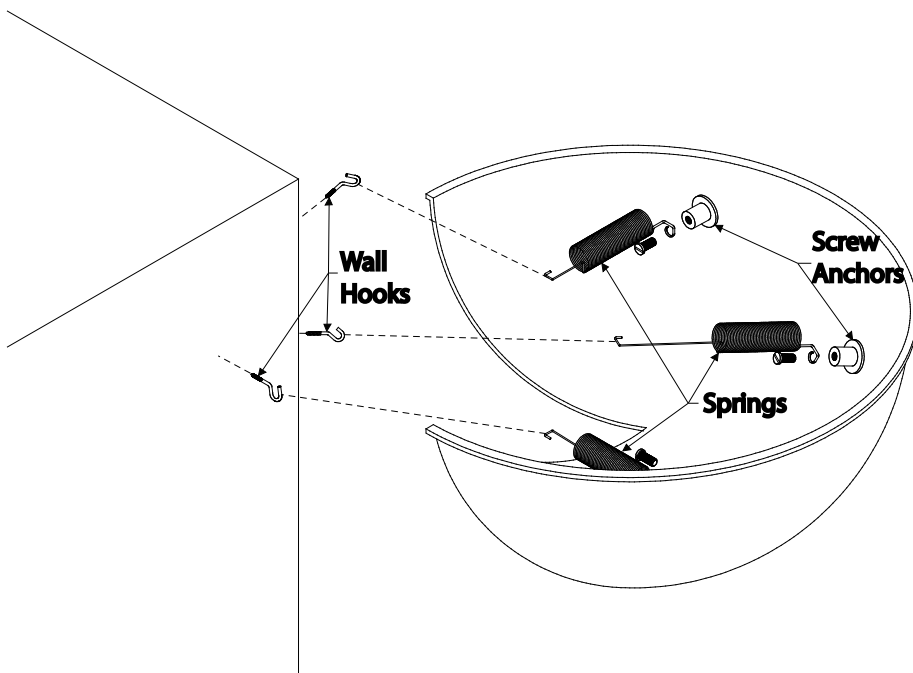


FIGURE #1

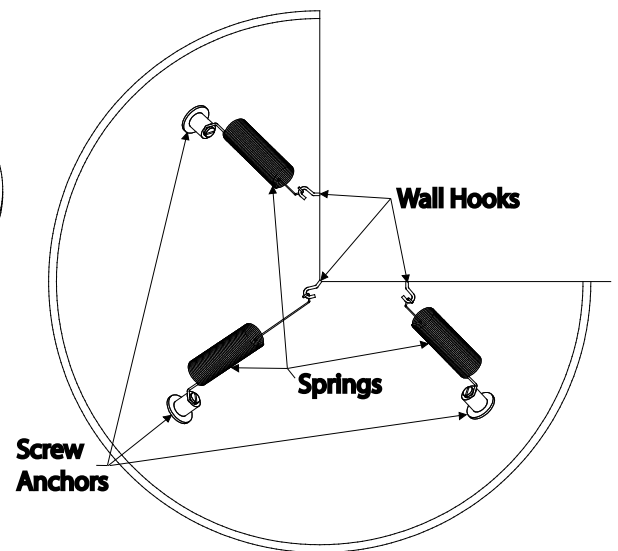


FIGURE #2