


OUTDOOR MIRROR BRACKETS


INSTALLATION INSTRUCTIONS

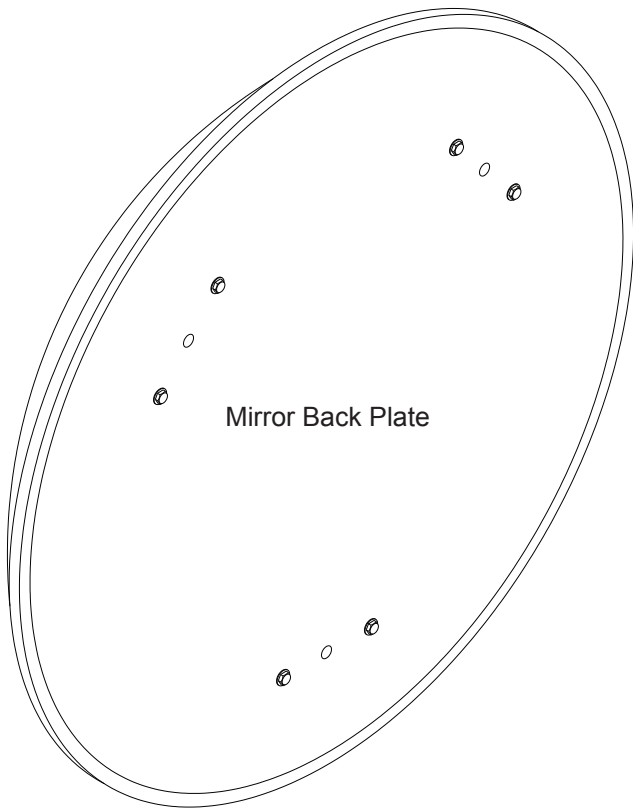

Hardware Contents:

- 6 Star Washers
- 6 Nuts
- 6 Bolts
- 3 Screw
- 3 Eyebolt
- 3 Large Washer

Note: 12" and 18" CVO's only use 2 Brackets.

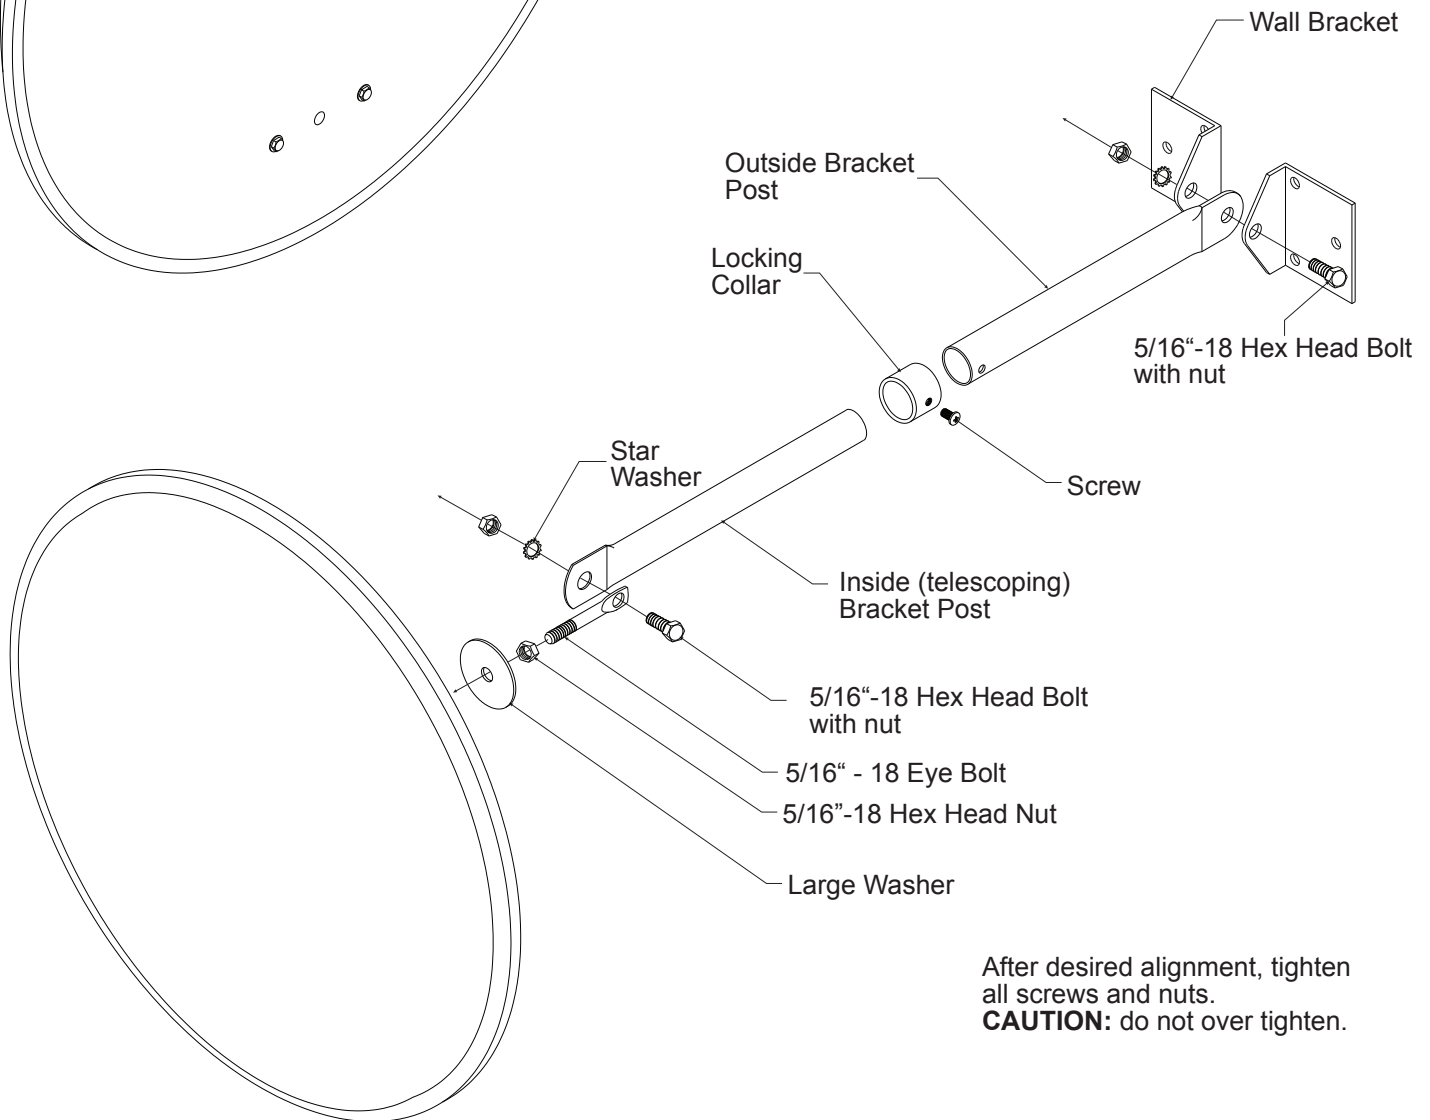

After desired alignment, tighten all screws and nuts.
CAUTION: do not over tighten.

Made in U.S.A.

