




Guardrail Installation

SPAN-TRACK®
by UNEX
the carton flow Authority

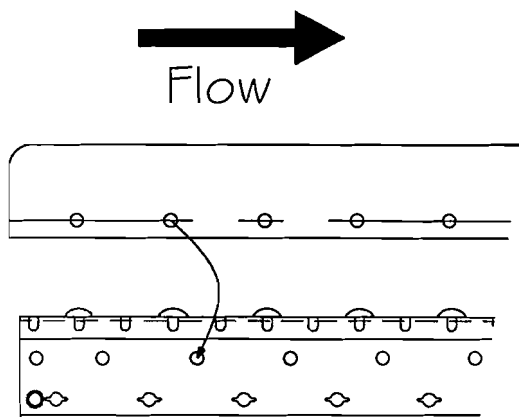

1. Center the guardrail along the edge of the track. The guardrail should be approximately the same length as the track.

2. Line up holes, as shown. Fasten the guardrail to the track using the supplied spacers and bolts. A bolt every 16" is recommended.

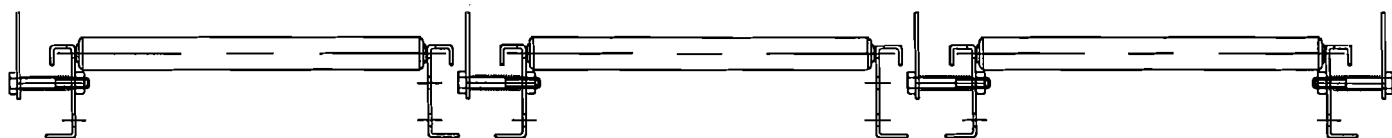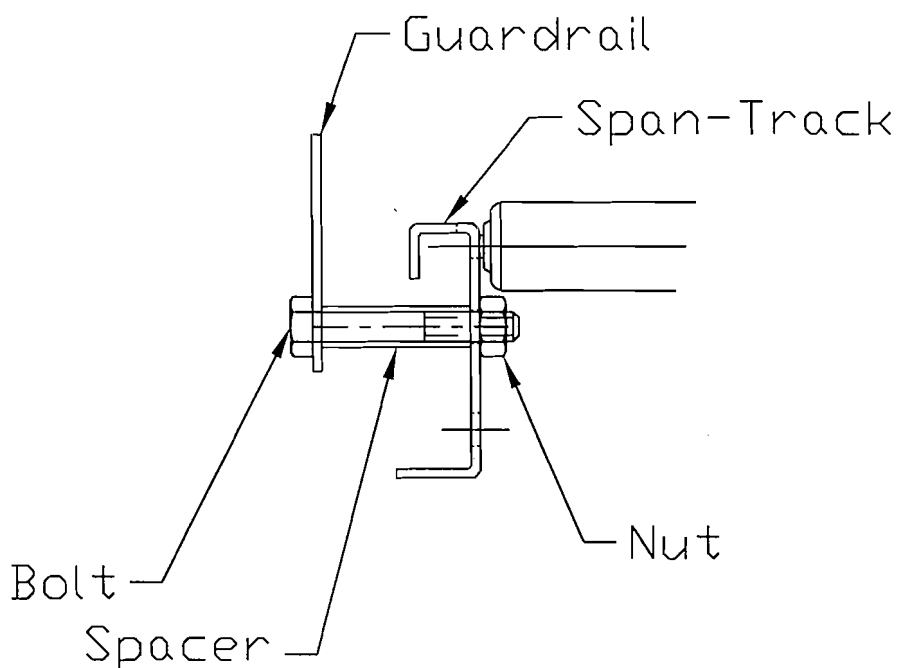

Using one piece of guardrail on each track, and two pieces at the end of the bay, windows or lanes are created.

UNEX Mfg . 50 Progress Place . Jackson, NJ 08527