

## Installation Information


S9 Hangerless Span-Track can be added to any standard pallet rack with step beams. Track sections are supported by the front and rear step beams. For each type of carton, install the first level of track following the instructions below and test for pitch before installing additional levels.

### 1. Adjust Beams

Set front beam to desired discharge elevation. Set rear beam at a higher elevation. Recommended pitch is 1 inch for every 1 foot of rack depth. (Example: 4 foot deep rack would require the rear beam to be set 4 inches higher than the front beam).

### 2. Add Track


Adjust and tighten the rear of the track so that it fits snugly between the steps of the step beams.

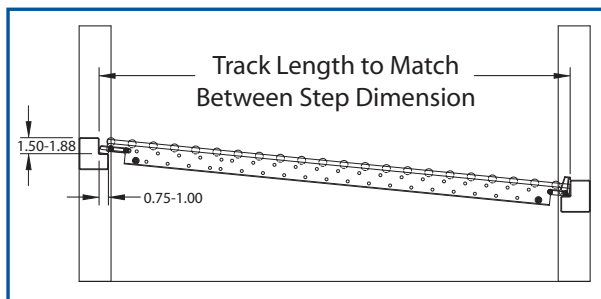

### 3. Test Pitch

Test installed track section for product flow to determine if rear beam needs readjustment for effective pitch.

**IMPORTANT:** Track section to be tested should be loaded and allowed to sit for 24 hours. Then remove cartons at pick face and check resulting flow. This is the most reliable way to ensure proper flow for your particular products and storage environment.

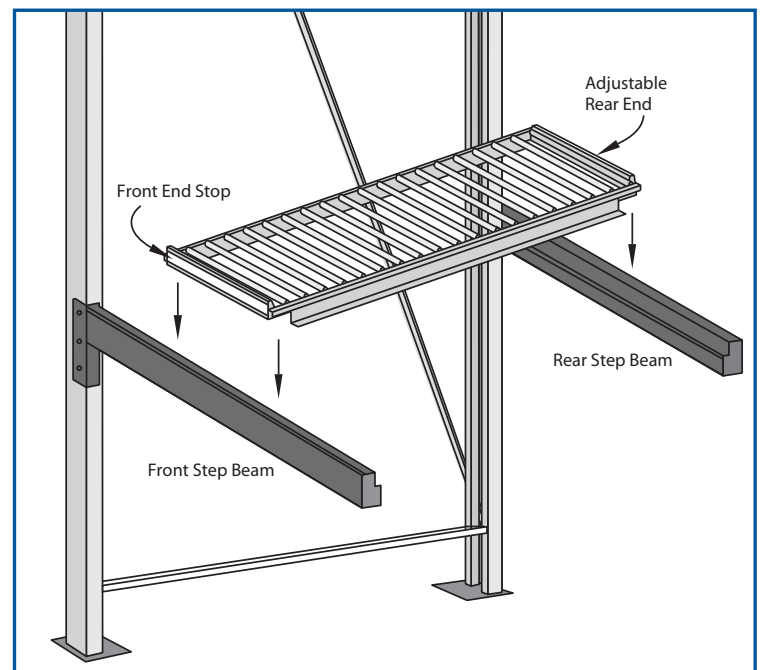

**SPAN-TRACK®**  
by UNEX

#### UNEX Manufacturing, Inc.

50 Progress Place, Jackson, NJ 08527  
732-928-2800 • 1-800-695-SPAN (7726) • FAX: 732-928-2828  
span@unex.com      www.unex.com

The Carton Flow Authority

