

SR-WM Horizontal Wall Mounted Material Rack
Assembly Instructions

9/25/2007

Wall mounted upright - 2 pcs.

Arms - 18" long (6 pcs.), 15" long (8 pcs.)

Hardware kit - M6-1.00x20mm long bolt (14 pcs.), M6 flat washer (14 pcs.), M6-1.00 nylock nut (14 pcs.) & Yellow end caps (14 pcs.)

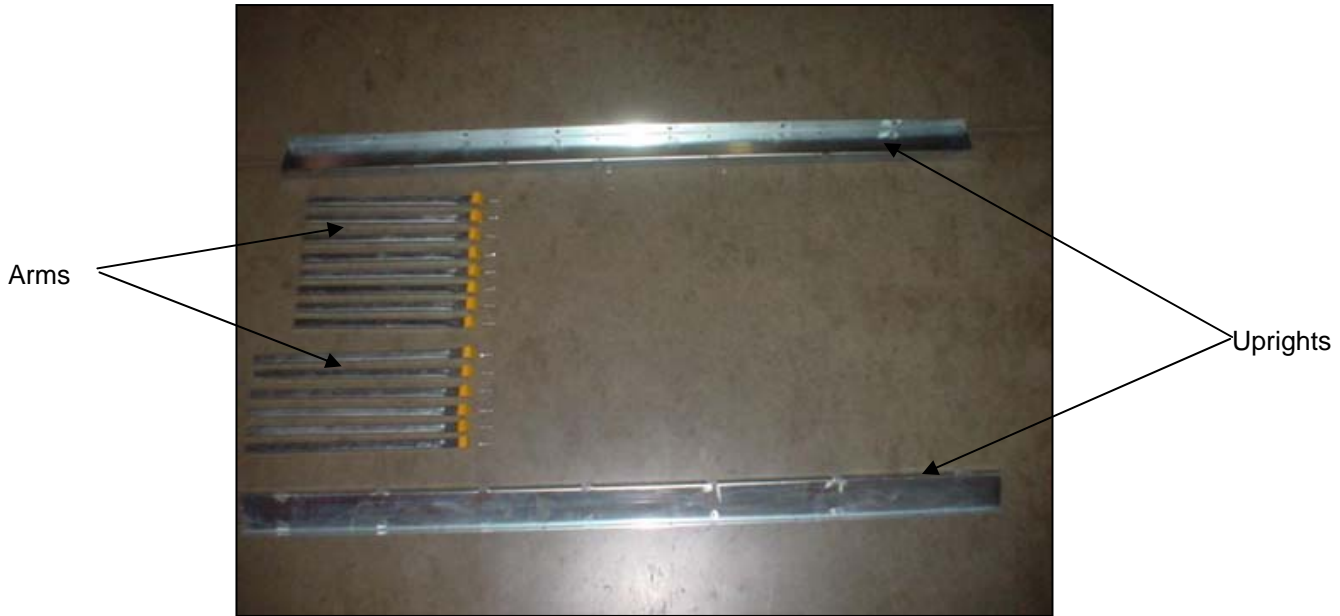


Figure 1
PARTS DESCRIPTION

STEP 1:

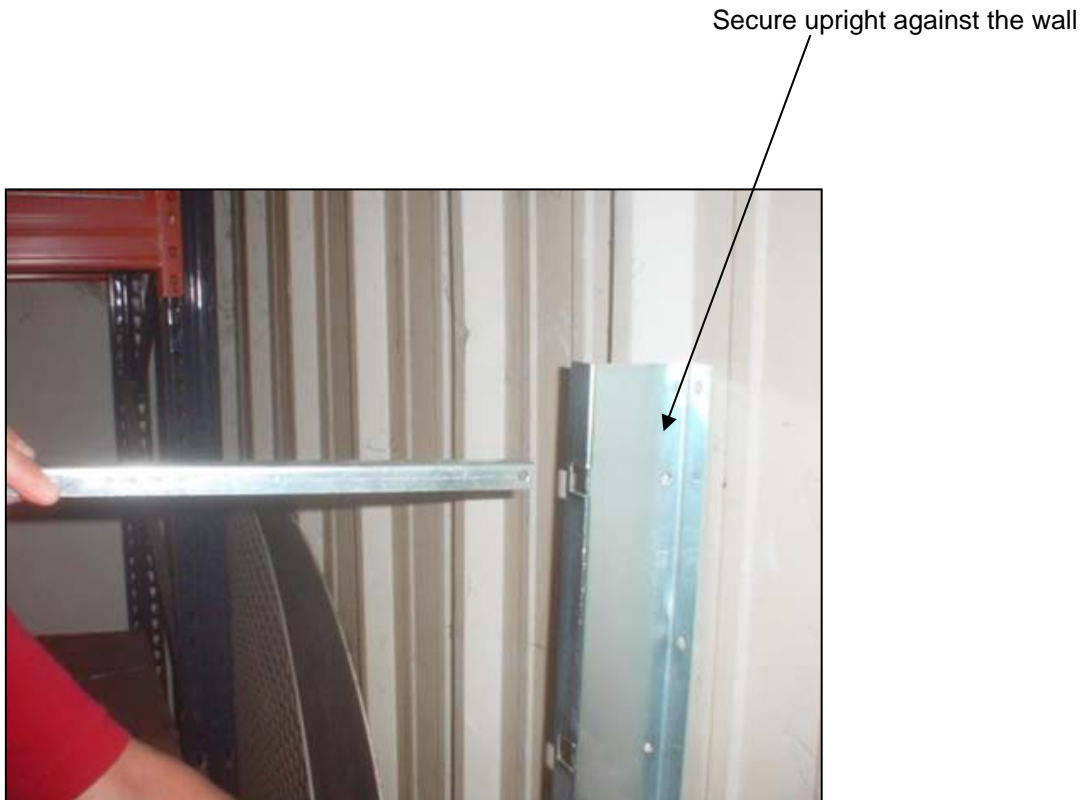


Figure 2

STEP 2:

Insert & secure load arms as shown below in Fig.3, 4, & 5.



Figure 3

STEP 3:

Use M6x1.00x20mm long bolt, & M6x1.00 lock nut to secure the arms and secure to wall



Figure 4