

RiveTier® I


UR Post should be oriented so that single slot flange faces front (or back) of unit, and double slot flange faces side of unit as shown

FBSR
if required;
see notes

TP
to adjoin
add-on unit
(if applicable)

SF or FAS
(single post footplate)
or DF or FAD
(double post footplate)
if required

Front

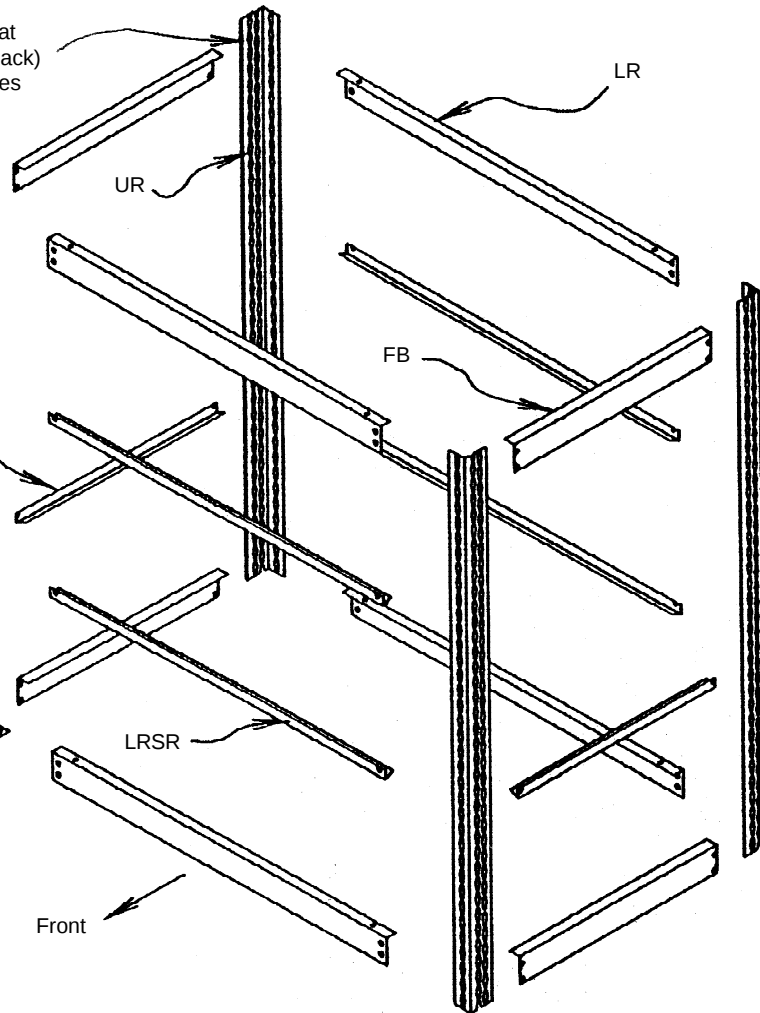


NOTES


- Particle board not shown for clarity. For ease of installation, shorter depth units should be assembled from the bottom up, inserting particle board as each shelf level is assembled.
- Double rivet beams (LR and FB) are required on all four sides at top and bottom of unit. Units over 8' high require additional double rivet beam levels.
- Front to Back Single Rivet (FBSR) shelf support required on intermediate shelves 30" or deeper.
- Rivets on beams insert into key slots on posts. Beam must be hit firmly with mallet to seat rivets properly.
- Bottom beam level to be 3" max. from ground level.

7005-02.01


Assembly Instructions RiveTier 1 Low Profile Shelving

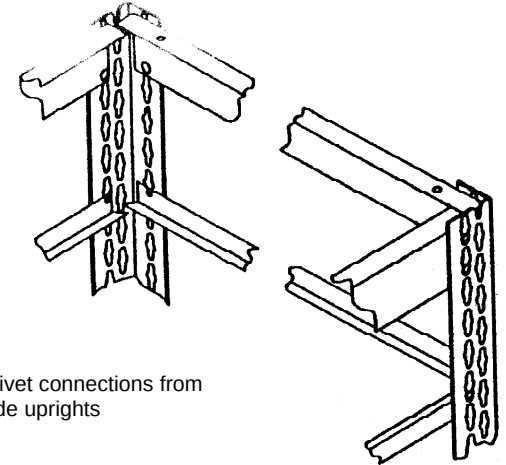

All rivet connections from
inside uprights

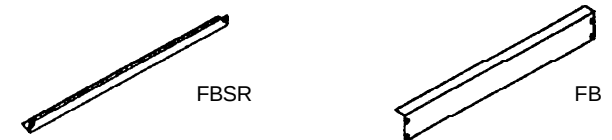

FBSR and FB are 2-5/16" shorter than nominal length
with rivets located 1/4" from end

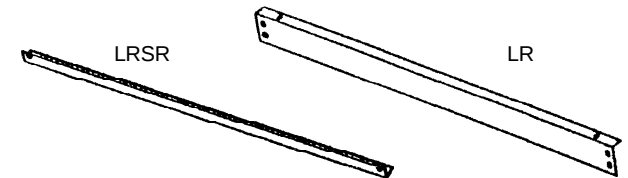

LRSR and LR actual length is same as nominal length
with rivets located 5/8" from end

 **Western Pacific
Storage Systems**

© 2001 Western Pacific Storage Systems