

Kit # 4560M-P


Kit, Rim Clamp Assembly, Spark Resistant


CONTENTS

Page

Operator's Manual for Morse Rim Clamp Assembly Kit with Spark Resistant Parts

Kit # 4560M-P Serial number 0616 to ____ (MMYY)

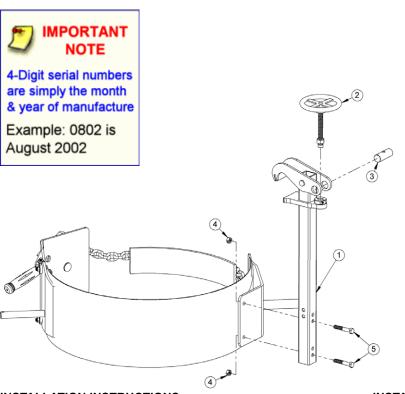

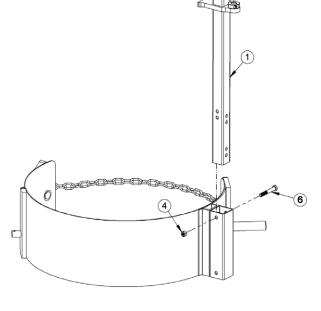

INSTALLATION INSTRUCTIONS for MORcinch Drum Holder

- Position Rim Clamp Assembly (item 1) on drum holder bracket with holes aligned.
- 2. Bolt in place using 2 bolts (item 5) and 2 nuts (item 4).

INSTALLATION INSTRUCTIONS for Drum Holder with Socket Tube

- Slide Rim Clamp Assembly (item 1) down through socket tube, and line up top holes in Rim Clamp Assembly with top holes of socket tube.
- 2. Use bolt (item 6) and nut (item 4) to bolt in place through the top holes of the socket tube and the Rim Clamp Assembly.

| ITEM | QTY | PART # | DESCRIPTION |
|------|-----|---------|--------------------------------|
| 1 | 1 | 5806M-P | WELD, RIM CLAMP, SR |
| 2 | 1 | 3616-P | HANDWHEEL ASM, 4", 3540-P 185R |
| 3 | 1 | 3510-P | THREADED BARREL, RIM CLAMP |
| 4 | 2 | 1169-P | NUT, 3/8-16 REV HEX LOCK |
| 5 | 2 | 82-P | HHCS, 3/8-16 X 2-1/4 GR2 |
| 6 | 1 | 1315-P | HHCS, 3/8-16 X 2-3/4 GR2 |



Kit # 4560M-P

Kit, Rim Clamp Assembly, Spark Resistant

Operator's Manual for Morse Rim Clamp Assembly Kit with Spark Resistant Parts Part # 4560M-P Serial Number 0616 to ____ (MMYY)

OPERATING INSTRUCTIONS

TO SECURE DRUM:

- 1. Turn hand wheel (item 2) counter clockwise to open top jaw.
- 2. Position drum holder assembly with bottom jaw of rim clamp directly under top rim of drum.
- 3. Turn hand wheel clockwise until top jaw is pressing tightly against top of drum (see Figure 1).
- 4. Secure drum with chain and ratchet mechanism. Drum is now ready to be lifted and tilted.

TO RELEASE DRUM:

- 1. Lower drum to floor in an upright position.
- Release chain from ratchet mechanism by applying pressure to ratchet handle in a clockwise direction with one hand and opening pawl to free ratchet with other hand. Remove chain link from ratchet.
- 3. Open rim clamp by turning hand wheel counter clockwise.

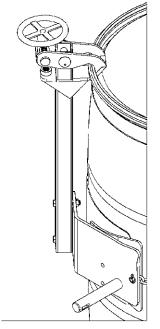


Figure 1
Plastic drum being lifted with Rim Clamp Assembly Kit installed.



WARNING: This product can expose you to chemicals including barium sulfate, cobalt, titanium dioxide, and 2-methylimidazole, which are known to the State of California to cause cancer, and bisphenol-A, which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov