





Ergonomic Workstations

Monitor Arm Assembly Upright Mounting

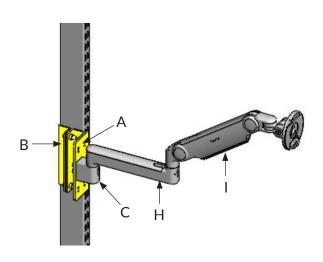

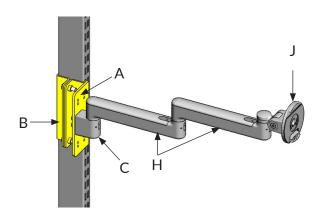

Tool List Ratchet with 1/2" socket 5mm hex wrench #2 Phillips screwdriver

Part # PFSMA - Pneumatic Height Adjustable Monitor Arm

ltem	Components	Qty
Α	Upright mounting clamp half with plate	1
В	Upright mounting clamp half without plate	1
С	Monitor arm mounting block	1
D	5/16" lock washer	2
Е	M8-1.25 x 30mm socket head cap screw	2
F	5/16-18 x 1" hex head cap screw	2
G	Monitor arm smart stop ring	2
Н	Monitor arm fixed link	1
I	Monitor arm adjustable link	1

Part # FPDA - Articulating Monitor Arm

Item	Components	Qty
Α	Upright mounting clamp half with plate	1
В	Upright mounting clamp half without plate	1
С	Monitor arm mounting block	1
D	5/16" lock washer	2
Е	M8-1.25 x 30mm socket head cap screw	2
F	5/16-18 x 1" hex head cap screw	2
G	Monitor arm smart stop ring	3
Н	Monitor arm fixed link	2
J	Monitor arm VESA mount	1



Monitor Arm Assembly Upright Mounting

Attach monitor arm mounting block (C) to upright mounting clamp half with plate (A) using M8-1.25 x 30mm socket head cap screws (E) and 5/16" lock washers (D) (Fig-1).

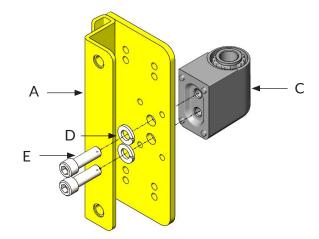


Fig-1

- **9** Hook upright mounting clamp halves (A) and (B) into desired postion on slotted upright (Fig-2).
- Secure clamp halves to upright using $5/16-18 \times 1$ " hex head cap screws (F) (Fig-2).

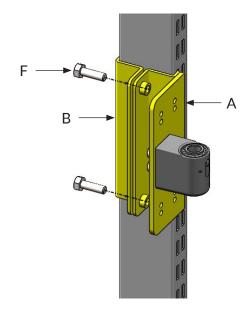


Fig-2





Ergonomic Workstations

Monitor Arm Assembly Upright Mounting

4a

Part # - PFSMA

Before adding each link of monitor arm, adjust monitor arm smart stop ring (G) (Fig-3a) according to step 2 in manufacturer's assembly instructions.


- 1. Insert monitor arm fixed link (H) into monitor arm mounting block (C) until release button locks in place.
- 2. Insert monitor arm adjustable link (I) into fixed link (H) until release button locks in place.
- 3. To remove links, press the release buttom and lift upward near the joint.


4b

Part # - FPDA

Before adding each link of monitor arm, adjust monitor arm smart stop ring (G) (Fig-3b) according to step 2 in manufacturer's assembly instructions.

- Insert the first monitor arm fixed link (H1) into the monitor arm mounting block (C) until release button locks in place.
- 2. Insert the second monitor arm fixed link (H2) into the first monitor arm fixed link (H1) until release button locks in place.
- 3. Insert monitor arm VESA mount (J) into second monitor arm fixed link (H2) until release button locks in place.
- 4. To remove links, press the release buttom and lift.

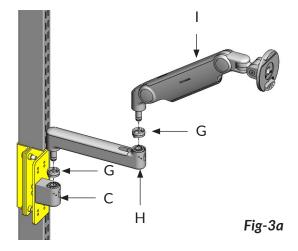

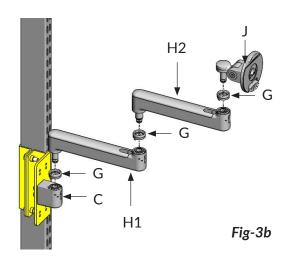

Reference pages 4-7 of manufacturer's assembly instructions for additional information to mount monitor and adjust PFSMA.

bostontec.com

989.496.9510